

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
98525	01/16/01	Vehicle #1200610 Koehring mobile crane, item #44 foot step bent, right front of crane.
98526	01/16/01	Vehicle #1200610 Koehring mobile crane, item #55 driver cab, metal rusting away. Repair as necessary
98527	01/16/01	Vehicle #1200610 Koehring mobile crane, item #59 load chart illegible, replace with good one or repair
98531	01/16/01	Hoist #178 in machine shop /trolley now has no high speed after certification/ work stoppage
98563	01/17/01	Hoist 178, bldg 133 machine shop. Located over woton jig borer. Replace pendant cable to correct no high speed on trolley
98598	01/17/01	Hoist #48 will not go up
98621	01/17/01	Hoist #406 item #8A north side, bridge drive gear set screws loose, check alignment of drive gears and tighten set screws.
98622	01/17/01	Hoist #406 item #8A south side, bridge drive gear set screws loose, check alignment of drive gears and tighten set screws.
98623	01/17/01	Hoist #406 item #8A north side, bridge drive brake out of tolerance, set to .031".
98625	01/17/01	Hoist #406 item #8A trolley drive brake out of tolerance, set to .031".
98627	01/17/01	Hoist #406 item #8A south side bridge drive motor conduit has two each. Conduit clamps missing. This allows conduit to hang perilously askew. The other clamps are welded to bridge beam.
98629	01/17/01	Hoist #176 item #13B adjust holding brake to .020"
98630	01/17/01	Hoist #176 item #18 replace safety latch on hook
98631	01/17/01	Hoist #157 item #18 replace safety latch on hook
98633	01/17/01	Hoist #157 item #27 replace down button and bridge reverse button on hoist pendant
98635	01/17/01	Hoist #123 item #13B adjust hoist holding brake to .020". This is the aggravating shaw box in the middle of the hoist frame brake cover with the impossible to get to screw.
98636	01/17/01	Hoist #123 item #27 replace hoist down pendant button.
98638	01/17/01	Hoist #123 item #31 adjust upper and lower limit switch
98652	01/17/01	Hoist 406, P&P bldg 1798. Replace pendant control cable. High speed now connected to low speed contactor. Contact for further instructions.
98696	01/17/01	Hoist 16, bldg 245, prep side west, no power to hoist. Need high lift. Contact for further instructions.
98708	01/17/01	Need electrician to check hoist making a noise
98716	01/17/01	Hoist #150 needs shoe repair, cable replacement, pendant change, etc. Will not maintain electrical continuity but for a short period of time. (send to 611)
98744	01/18/01	Hoist #116 in bldg 1798 is not working. It will not go up and down. Please send someone here to look at it.
98747	01/18/01	Work stoppage. Hoist #150 is down and unable to get up. Please check and repair so work can resume. Thank you
98760	01/18/01	Hoist #116 in bldg 1798 is not working. It will not move left or right of the bridge.
98795	01/18/01	Hoist 150, NDI line 133, the other Yale, not the one with new drive. Replace hoist contactor and check associated wiring from shoes to control box.
98797	01/18/01	Hoist 16, bldg 245, prep side west, no power to hoist. Need high lift. Contact for further instructions.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
98834	01/18/01	Hoist 89, old fiberglass shop, above new oven. Replace emergency stop switch assembly in pendant control.
98873	01/18/01	Dayshift----- the hoist on cadmium plate line seem to have dead spots in them. I think there's a problem in the tracks themselves, maybe some trash of some sorts. Thanks (this is causing a problem for the workers when lifting and dropping parts)
98974	01/19/01	Hoist 48, street end H-53 hangar. Repair/replace speed and direction contactors/ notify when complete
98978	01/19/01	Hoist 259, CAD line plating shop, check full length of hot rails for broken hangers or covers, check rail splices. POC plating shop.
98982	01/19/01	The hoist in bldg 1798 is not working again. It will not move left and right. Please send someone down here to look at it.
98992	01/19/01	Hoist number 263 over our oil tank will not go up or down. Appears to be a problem with the hand control box. Thanks
99018	01/20/01	Hoist 132, 137 machine shop ramp extension, manufacture and install new cover on control box.
99028	01/22/01	Chain hoist #319 is out of certification. Due date 1/18/01. I have tagged hoist out of service.
99140	01/22/01	Overhead hoist #16 not working properly
99197	01/23/01	Hoist 111 intermittingly starts and stops while using. Visible sparks are present at the rail connected to the hoist.
99259	01/23/01	Hoist 150, bldg 133 NDI line. Replace stainless steel pendant control box and rewire main line contactor to emergency stop switch
99297	01/24/01	Hoist 231 will not traverse.
99362	01/24/01	Hoist 231, machine shop 133. Replace main line contactor and pendant wire.
99363	01/24/01	Hoist 111, bldg 188 west end. Replace runway hot shoes with cast iron shoes. Replace and extend pendant control wire. See for shoes
99414	01/24/01	Hoist will not go up or down, cannot move down rail electrical wire appears to be hanging up... POC anyone in work area...NDT
99589	01/26/01	Hoist number 390 has air leak. Need repaired ASAP
99835	01/29/01	Station 11 outside hoist leaking. Repair hose. Work stoppage. Thanks.
99837	01/29/01	Repair busted air line on tower hoist. Work stoppage.
99852	01/30/01	All tank stand load certificates in shop 93117a have expired need to be load tested ASAP.
99874	01/30/01	Hoist 215, NDI line 133. Replace hotshoe and control wiring. On C&M hoist.
99880	01/30/01	Test cell hoist will move forward or backward
99930	01/30/01	To 65500. Replace wire rope on hoist 181. 402 shop rope in 1006, cert. In 61100
100087	01/31/01	Tie-in 4 loose connections in hoist control box on terminal block
100118	02/01/01	Engine cradle hoists 361 and 362 making grinding noise check if chain wheel or hoists need replacing. Can rebuild one in shop found parts were ordered.
100120	02/01/01	Hoist 390 behind blade shop in front of arties x-ray shop repair air leak. Maybe yellow hose from hurstons note
100124	02/01/01	Attn hoist team; engine elephant stuck on switching station
100257	02/02/01	Hoist #255 not working properly. Loss of contact along track.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
100317	02/02/01	Carrier assemblies continually pop circuit breakers during engine movement. Please repair.
100347	02/02/01	Upon inspection of 3 of the cranes in the building, I found the certification tags damaged and portions missing. I can't see the certification date on them. The tags need to be placed on a separate metal tag, rather than be stuck to the back of the pendant.
100501	02/05/01	Hoist #261 adjust upper limit switch
100502	02/05/01	Hoist #266 replace pendant wire
100503	02/05/01	Hoist #258 replace pendant control box and strain relief cable
100505	02/05/01	Hoist #269 weighted limit switch inoperative and upper/lower limit switch malfunctioning
100507	02/05/01	Hoist #269 replace hook block assembly, old one corroded NDI prior to reassembly
100560	02/06/01	Bridge crane #402 problems-emergency stop-lower hook limit switch-wire rope revving improperly on drum-dogleg in wire rope.
100578	02/06/01	Hoist #268 hook severely corroded, replace hook. Ndi prior to installation
100579	02/06/01	Hoist #261 replace pendant controller, box damaged
100580	02/06/01	Hoist #264 replace pendant controller, box damaged
100597	02/06/01	Attn; 65500: hoist 83 dynamic component test cells hook NDT
100634	02/06/01	Hoist #107 in the fwd trans test cell hook needs to be repaired. Thanks
100668	02/06/01	Hoist #389 repair dead end connector on roller link chain
100669	02/06/01	Hoist #388 install safety latch on upper hook
100670	02/06/01	Hoist #407 install lockable disconnect, paint orange and identify with hoist number
100671	02/06/01	Hoist #407 tighten askew ground wire in control box of hoist
100672	02/06/01	Hoist #407 tighten jib pillar base bolts
100673	02/06/01	Hoist 268 change or loosen bearing nut to free rotation
100707	02/07/01	Please replace chain bag that has fallen off hoist #a-277 located in the x-ray vault.
100757	02/07/01	Hoist 156, NDI green line 133. Install new drive tractor on hoist as per alt/mod memo.
100761	02/07/01	Hoist 388, dynamic components TC Yale ACL. Replace air hose with 3/4" size coil hose.
100763	02/07/01	Hoist 83, dynamic components TC, mays memorial, Ingersoll Rand, install air line lubricator at hoist connection.
100764	02/07/01	Hoist 57, adjust bridge brakes they are askew
100765	02/07/01	Hoist 56 adjust bridge brakes
100767	02/07/01	Hoist 56, replace missing coil bushing
100768	02/07/01	Hoist 56, reweld broken festoon arm
100836	02/08/01	Attn 65500:--hoist 174, Chicago pneumatic on same bridge Replace pull ropes
100837	02/08/01	Attn 65500:--hoist 277, in x-ray 188, repair/replace chain bag, container
100838	02/08/01	A control panel door on the hoist has pop open. Please send someone to close.
100839	02/08/01	Attn 65500:--hoist transmission shop T/C 133. Acco hoist replace hook latch

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
100842	02/08/01	Please put a chain bucket on hoist 389
100891	02/08/01	Need maintenance to repair hoist on P/T line hoist #207 work stoppage
100913	02/08/01	Hoist 56, reweld broken festoon arm
100925	02/08/01	Control cable for hoist #174 needs repair.
100948	02/08/01	Forklift is not working and is blocking aisle,
100972	02/08/01	Overhead hoist off track in large NDI shop in bldg 133. Work stoppage.
101018	02/09/01	Attention 652: repair hoist #259 in the plating shop
101028	02/09/01	Hoist 90 C scan bldg remove hook for NDT
101029	02/09/01	Hoist 332 137 machine shop remove hook for NDT
101030	02/09/01	Forklift is not working and is blocking G aisle
101075	02/09/01	Hoist electric motor smoking. Hoist inoperable. Power shut down. Work stoppage. Over penetrant line in NDI shop.
101079	02/09/01	Hoist electric motor smoking. Hoist inoperable. Power shut down. Work stoppage. Over penetrant line in NDI shop.
101215	02/12/01	The control box door on the hoist has fallen open. Will you please send someone here to close it.
101267	02/12/01	The bridge function of hoist #21 inoperable.
101273	02/12/01	The bridge function of hoist #21 inoperable.
101318	02/13/01	Two hoist in the CAD section (hoist #259 & 260) are inoperative. Turn the power on and the hoist takes off without touching any buttons.
101352	02/13/01	Rugger floor cranes 6013, hydraulic leak from cylinder. Will not go all the way up.
101353	02/13/01	Hoist #149 replace pendant control box
101354	02/13/01	Hoist #149 relabel hoist to read 500 lbs. capacity
101356	02/13/01	Hoist #151 relabel hoist to read 500 lbs. capacity
101358	02/13/01	Hoist #154 replace pendant control and cable
101375	02/13/01	Please remove the load test tags on 11 tank stands in our shop.
101388	02/13/01	Attn: 65500, hoist 55, remove hook and have NDT done
101443	02/14/01	Hoist #263 not working. Buzzes when up or down buttons are pushed.
101446	02/14/01	Overhead hoist #3 has stopped with a load on it, need repair ASAP work stoppage
101497	02/14/01	Hoist #419 hoist to trolley mounting hardware loose, looks to be an improper application. Need engineering intervention, table pounder said so.
101498	02/14/01	Hoist #419 external drive gears and couplings on bridge drive, tighten loose set screws.
101499	02/14/01	Hoist #419 tighten loose conduit and festoon track hangers.
101500	02/14/01	Hoist #419 adjust hoist holding brake.
101593	02/15/01	Hoist 117, tighten loose contactor mount
101595	02/15/01	Hoist 117, replace bridge brakes
101816	02/20/01	Hoists will not go up or down labor stop
101839	02/20/01	Hoist number #89 will not operate up or down. Work stoppage.
101962	02/21/01	Hoist #164 jib column has broken bolts in roller path of column rollers. Repair

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
101965	02/21/01	Hoist #164 jib runway rail adapter to column missing lock washer, replace lock washer and tighten bolt, check other three bolts for equal tensioning, askewness and parallelism
101966	02/21/01	Hoist #164 no bumper on hoist trolley, hoist case capable of smashing into jib column attention engineering/inspector
101967	02/21/01	Hoist #164 holding brake coil not parallel to brake, adjust coil
101968	02/21/01	Hoist #164 no lockable disconnect attention engineering/inspector
101970	02/21/01	Hoist #164 crane labeled in tons not pounds, relabel 500 lbs. capacity.
101971	02/21/01	Hoist #164 hoist needs 360 degree electrical feed if it is to be left as is with no stops on jib movement attention engineering/inspector
102000	02/21/01	Ticket #93656 was called in on 11/15/00 that lift was out of certification and hinge was broken. Lift was recertified but hinge was not fixed and ticket was closed. We need the hinge fixed. Lift will not operate properly/keeps getting stuck safety!
102046	02/21/01	Attention 65500: grease block on hoists 121, 122, and 126
102119	02/22/01	Attention 65500: grease block on hoists 121, 122, and 126
102266	02/23/01	Hoist #419 will not move north or south along the beam. Hoist inop
102268	02/23/01	Certification tag missing from hoist control. Needs recertified. Hoist #109 10000 lb cap.
102275	02/23/01	Attn 65500: replace emergency stop button on hoist 391 in rotor blade shop, bldg 1665.
102285	02/23/01	Attn 65500: hoist #335 rotor balance shop- hook NDT
102288	02/23/01	Attn 65500: hoist #68 rotor blade shop- hook NDT
102292	02/23/01	Attn 65500: hoist #169 welding shop- hook NDT
102333	02/23/01	Battery type lifts does not work. Has been worked on but not fixed
102335	02/23/01	Battery type lifts .has been worked on before not fixed
102338	02/23/01	Battery operated lifts. Worked on before not fixed
102360	02/23/01	Attn 65500: hoist 419 trolley stuck but motor still functions
102415	02/26/01	Hoist #56 located in the CH-46 area has a bad bridge drive.
102432	02/26/01	Cert tag missing FM hoist control hoist #109. Needs new tag or recertified. Old ticket #102268
102451	02/26/01	Air leak at connection on hoist #242
102495	02/26/01	Hoist #144 check and add oil as needed to bridge drives
102496	02/26/01	Hoist #144 tighten bridge drive motor bolts on both drives
102497	02/26/01	Hoist #144 tighten bridge drive gear box cover bolts on both drives
102498	02/26/01	Hoist #144 lubricate bridge drive zerk fittings
102499	02/26/01	Hoist #144 replace missing pendant hardware and data plate
102500	02/26/01	Hoist #144 replace bridge drive motor lead cover
102512	02/26/01	Hose on pneumatic hoist has broken and is making an earsplitting noise, almost a work stoppage. Please bring stepladder to reach shut off valve. Job is in pneumatics cleaning shop.
102576	02/27/01	Hoist #150 lubricate zerk fittings
102577	02/27/01	Hoist #156 lubricate zerk fittings
102578	02/27/01	Hoist #156 add gear lube to gear box

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
102579	02/27/01	Hoist #156 adjust brake
102580	02/27/01	Hoist #156 replace wire rope
102581	02/27/01	Hoist #156 tighten loose wires in control cabinet
102689	02/28/01	Attn 65500: hoist 240 has leaking air supply line. Fix or replace as needed. Currently disconnected. Located in pneumatics cleaning shop across from old safety office.
102696	02/28/01	Hoist control cable has exposed wires at the hoist.
102709	02/28/01	Attn 65500: hoist 259 has electrical malfunction. Press up button, hook goes up but comes down as soon as released. Sometimes comes down when up button pressed. Repair as needed.
102724	02/28/01	Adjust bridge brake on west side. Hoist #226
102725	02/28/01	Tighten set screws on the open gears on east & west end of bridge drive. Hoist #226
102726	02/28/01	Repair safety latch on hook. Hoist #226
102751	03/01/01	Attn: 65200: floor crane 6013 has been leaking hydraulic fluid. Check for leaks and repair also top of fluid level. Plating shop.
102815	03/01/01	Hoist in canning needs repairing. Not functional. Work stoppage
102820	03/01/01	Attn 65500: hoist 394 clamp holding control cable sheathing to power cabinet is loose, exposing wires to sharp edges. Hoist now out of service. Reconnect clamp.
102824	03/01/01	Attn: 65500 hoist 226 has stripped screw in hoist brake cover. Go to next size or helicoil.
102843	03/01/01	Attn 65500: install inline oiler on hoist 24.
102854	03/01/01	The vertical lift ID #VLC-5 in shop 96117 door is broken hangs up and won't let it come all the way down some time. Thank you..
102946	03/02/01	Hoist #161 bridge and trolley wheels need greasing
102947	03/02/01	Hoist #161 remove loose wire that is tied to runway rail and airline on wall
102949	03/02/01	Hoist #165 bridge and trolley wheels need grease
102950	03/02/01	Hoist #165 check adjustment of hoist holding brake
102965	03/02/01	Battery type lifts does not work has been worked on but not fixed
102983	03/02/01	Attn 65500: install inline oiler on hoist 161 over dip tanks behind bldg 133 snack machines.
102987	03/02/01	Bridge function of hoist #21 is inoperable.
102991	03/02/01	Bridge is not function properly on hoist #21.
103010	03/03/01	Please repair control cable on hoist #174.
103051	03/05/01	Need a crane stop moved about 6" located over the dual head Campbell grinder. Please talk to the machinist operating the Campbell grinder.
103078	03/05/01	Certification tag missing on hoist control. Need new tag and/or recertified
103090	03/05/01	Attn: 65500. Hoist 65 rotor blade shop. Reset holding brake air gap to .045"
103105	03/05/01	Hoist #91 in the propeller shop has a braking problem. The trolley/bridge free rolls. Very unsafe!
103111	03/05/01	Hoist #117 has an illegible certification tag.
103113	03/05/01	Hoist #117 trolley/bridge brakes free roll....unsafe!
103114	03/05/01	Hoist #77 in the propeller shop has an illegible certification tag.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
103115	03/05/01	Hoist #77 in the propeller shop has a cracked control panel housing
103125	03/05/01	Bridge crane #402 problems wire rope frayed-limit switch-wire rope revving-power cord eyelets-brakes-emergency stop.
103137	03/05/01	Air hoist #174 control lanyard (wire cable) end, broken / frayed wires exposed. Hoist is down for ***safety hazard****
103157	03/06/01	Attn 65500: replace festoon wire. Replacement wire rope was ordered also. See ticket 100560.
103171	03/06/01	The clasp on the hook of hoist 186 is broken. Thanks
103195	03/06/01	Attn 65500: hoist 174 T-64 line 133. Air hoist on rail repair control handles again. This time make two handles instead of on trapeze style that hangs up on stuff.
103220	03/06/01	Air hoist #174 control lanyard (wire cable) end, broken / frayed wires exposed. Hoist is down for **safety hazard**
103225	03/06/01	Bridge is not functioning properly on hoist #21
103234	03/06/01	Pettibone mobile crane inspect air filter
103236	03/06/01	Pettibone mobile crane remove one fwd and one rear wheel assy. for inspection of brakes. Brake master cylinder corroded and rubber boot damaged. Electrical connection on master cylinder corroded.
103237	03/06/01	Pettibone mobile crane windshield cracked over driver
103238	03/06/01	Pettibone mobile crane on rubber load chart is not down rated to 60% of rated load
103239	03/06/01	Pettibone mobile crane two-block alarm has no audible sound when activated. Load indicator inoperative
103240	03/06/01	Pettibone mobile crane some hydraulic hoses under crane with fabric covering are frayed, exposing steel
103255	03/06/01	The vertical lift ID #VLC-5 in shop 96117 door is broken hangs up and won't let it come all the way down some time. Thank you. (lower hinge is broken and need welding.)
103287	03/07/01	The vertical lift ID #VLC-5 in shop 96117 door is broken hangs up and won't let it come all the way down some time. Thank you. (lower hinge is broken and need welding)
103362	03/07/01	The vertical lift ID #VLC-5 in shop 96117 door is broken hangs up and won't let it come all the way down some time. Thank you. (lower hinge is broken and needs welding.)
103457	03/08/01	The vertical lift ID #VLC-5 in shop 96117 door is broken hangs up and won't let it come all the way down some time, (lower hinge is broken and need welding)
103497	03/09/01	Certification tag missing FM hoist control #109. Reference ticket #'s 102268, 102432, 103078. (work stoppage)
103539	03/09/01	Attn 65500: hoist 21 bridge drive not working.
103673	03/12/01	Hoist number 25 is inoperable. Need to have crane repaired.
103779	03/13/01	Hoist #253 low speed down inoperative
103780	03/13/01	Hoist #253 repair loose limit block and micro switch
103781	03/13/01	Hoist #253 lube zerk fittings on hoist motor
103782	03/13/01	Hoist #254 lube zerk fittings on hoist motor
103786	03/13/01	Hoist #254 brake air gap askew, set to .035
103787	03/13/01	Hoist #255 tighten gear case cover bolts

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
103789	03/13/01	Hoist #255 tighten hoist motor mount bolts
103790	03/13/01	Hoist #255 replace broken hot rail bracket
103791	03/13/01	Hoist #255 adjust upper limit switch
103792	03/13/01	Hoist #255 lube zerk fittings on hoist motor
103793	03/13/01	Hoist #257 lube zerk fittings on hoist motor
103794	03/13/01	Hoist #257 tighten hoist motor mounting bolts
103795	03/13/01	Hoist #257 adjust askew air gap to .031 on hoist holding brake
103798	03/13/01	Hoist #270 lube zerk fittings on hoist motor
103800	03/13/01	Hoist #271 replace wire rope wire rope core protruding from rope on drum with hook at lower limit
103801	03/13/01	Hoist #272 adjust upper limit switch
103803	03/13/01	Hoist #272 lube zerk fittings on hoist motor
103804	03/13/01	Hoist #273 lube zerk fittings on hoist motor
103808	03/13/01	Hoist #273 wedge fitting on dead end of wire rope has cable clamp pulled into bottom of wedge
103809	03/13/01	Hoist #273 hot rail has a vertical bend in one section near the end, repair
103810	03/13/01	Hoist #273 tighten hoist motor mounting bolts
103871	03/13/01	Continuous 40 error messages in tandem with #1 conveyor stalls. Please help!
103995	03/14/01	Motor burnt up on hoist in test cell #2
104001	03/14/01	Hoist #391 hoist up contactor has loose wire
104002	03/14/01	Hoist #391 cap on e-stop broken
104003	03/14/01	Hoist #391 bridge runway support post hold down bolts, 2 each loose
104004	03/14/01	Hoist #391 hoist gear box cover bolts loose
104005	03/14/01	Hoist #391 lubricate bridge wheel zerk fittings
104026	03/14/01	Hoist in 402 test cell is down
104062	03/14/01	Attn: 65100. Replace trolley on jib hoist 331. Tall jib towards back of machine shop. New trolley is located in shop 655, bldg 1006. Notify 61100 for load test when completed.
104063	03/14/01	Attn: 65100. Replace trolley on jib hoist 330. Tall jib towards back of machine shop. New trolley is located in shop 655, bldg 1006. Notify 61100 for load test when completed.
104096	03/15/01	Please move stops for crane 91 in P-3 rubber room. Stops need to be moved so crane will get closer to wall. Thanks.
104190	03/16/01	In the stripping hanger, there are two (2) up-right man-lifts, SNs 8525 and 8437. Please investigate and determine if repairable. Located in east corner. Please repair if possible.
104209	03/16/01	Attn: 65500. Assist 65100 with rigging and removal of hot air duct winch; investigate runway 28 winches for possible use in place of existing winch.
104210	03/16/01	Motor on hoist burnt up need to repair or replace
104214	03/16/01	Attn 65500; new hoist 29, machine shop 133, relocate end stop on south end of bridge to stop hoist before air hose bunches up.
104227	03/16/01	Error messages range from 208,209 to 215. Can you help?

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
104230	03/16/01	Attn 65500; hoist 394, by hazardous waste. Pendant wire strain relief connector came loose from box, reattach.
104231	03/16/01	Attn 65500; hoist 106, new extension on plating shop. Bridge does not move. Stuck at one end. Looks like you'll have to climb ladder behind blaster under bridge box. Check fuses in bridge box.
104383	03/19/01	Hoist #89 will not work. Work stoppage.
104400	03/19/01	Hoist #169 lubricate zerk fittings on bridge wheels
104401	03/19/01	Hoist #181 lubricate zerk fittings on bridge wheels
104402	03/19/01	Hoist #181 lubricate zerk fittings on hoist trolley wheels
104403	03/19/01	Hoist #181 adjust holding brake
104404	03/19/01	Hoist #335 adjust holding brake
104405	03/19/01	Hoist #335 adjust trolley brake
104406	03/19/01	Hoist #335 adjust jib brake
104408	03/19/01	Hoist #335 tighten trolley motor mounting bolts
104511	03/20/01	Hoist 21, 46 hangar, check operation of bridge drive controls
104538	03/20/01	Attn: shop 65800, continue on with finding electrical problem on hoist 21. Bridge contactor pulls in but bridge does not operate. Lift on site. Contact 65500 for additional information.
104540	03/20/01	Attn; shop 65800, continue on with finding electrical problem on hoist 21. Bridge contractor pulls in but bridge does not operate. Lift on site. Contact 65500 for additional info. Work stoppage
104545	03/20/01	Hoist 91, P3 blade rubber shop (old rubber shop) remove extra end stops from 3 runways. Check for clearance of bridge with original end stops
104577	03/21/01	A 208 error message...tried to recycle the extractor pins, but to no avail. Help.
104603	03/21/01	Work stoppage, electrical problem on hoist...#295
104673	03/22/01	There is a problem with the hoist over the band saws in shop 93552, the hoist cable is overlaid on the drum, work stoppage
104682	03/22/01	The 1-ton hoist in the ramp building has a problem when it trolleys left to right, motor smokes, work stoppage
104716	03/22/01	Attn 65500 hoist 295 high bay area 53 transmission shop pendant wire problem cut back or replace pendant wire
104763	03/23/01	Attn 65100, hoist 21 H46 hangar, remove four bridge drive motors deliver for rewinding.
104819	03/23/01	Hoist #392 tighten hoist gear box cover bolts
104820	03/23/01	Hoist #392 tighten hoist trolley motor bolts
104821	03/23/01	Hoist #392 tighten bridge gear box bolts
104822	03/23/01	Hoist #392 eastern bridge gear box low on oil, fill to weep hole
104823	03/23/01	Hoist #392 grease zerk fittings on bridge and hoist
104825	03/23/01	Hoist #393 grease zerk fittings on bridge and hoist
104826	03/23/01	Hoist #393 both bridge gear boxes, add oil to weep hole
104827	03/23/01	Hoist #393 tighten hoist gear box cover bolts
104828	03/23/01	Hoist #394 tighten hoist gear box cover bolts
104829	03/23/01	Hoist #394 repair floating pendant. Connector pulled from trolley connector box

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
104830	03/23/01	Hoist #394 grease zerk fittings on bridge drive and hoist
104831	03/23/01	Hoist #394 add oil to both bridge gear boxes. Add oil till it weeps
104832	03/23/01	Hoist #394 north bridge drive, gear box bolts loose, tighten same
104834	03/23/01	65500 remove trolley from jib in small room in rubber shop under mezzanine. See NDI for the key. Install on bridge in old rotor blade anodize area where the cable reel hoist was. Hang hoist 2 in small cabinet in that room on bridge
104863	03/23/01	Attn: shop 658 continue on with finding electrical problem on hoist 21. Bridge contractor pulls in but bridge does not operate. Lift site. Contact 65500 for additional info work stoppage
105003	03/26/01	Hoist #411 jib base bolts loose
105005	03/26/01	Hoist #411 holding brake coil air gap not correct
105006	03/26/01	Hoist #411 upper limit allows hook to two block
105007	03/26/01	Hoist #410 jib base bolts loose
105008	03/26/01	Hoist #109 set screws loose on bridge drive coupling
105009	03/26/01	Hoist #109 set screws loose on bridge drive pillow blocks
105010	03/26/01	Hoist #109 set screws loose on bridge drive gears
105011	03/26/01	Hoist #109 hoist gear box drain plug loose
105012	03/26/01	Hoist #109 trolley brake cover hardware loose
105013	03/26/01	Hoist #109 bridge drive motor mounting bolts loose
105014	03/26/01	Hoist #109 lube zerk fittings on pillow blocks, bridge wheels and trolley wheels. Lube external gearing
105015	03/26/01	Hoist #109 grease will not enter north west inside bridge truck wheel
105016	03/26/01	Hoist 394 hook will not rotate with test load. Center roll pin in hook nut
105041	03/27/01	Hoist #189 located in test cell #2 is out of cal. Also hoist #317 located in test cell #6 is out of cal.
105141	03/27/01	Hi guys!!! Hoist Cable repair. We were having problems with the first line anodize tank. It has been corrected. Thank you so very much. Have a good night.
105212	03/28/01	Vertical lift elevator leaking . Shop area 96332 ID #VLC19
105279	03/29/01	Vertical lift elevator leaking . Shop area 96332 ID #VLC19
105288	03/29/01	High limit switch improperly set. Hoist no longer goes high enough to lift props to cold roll machine. See for details. This hoist is actually located in 94301 blade shop.
105289	03/29/01	Vertical lift elevator leaking . Shop area 96332 ID #VLC19
105306	03/29/01	4000#overhead hoist has broken cable, this is a work stoppage situation.
105320	03/29/01	Overhead hoist will not traverse, please check, and repair. Send to 65200 electrical shop.
105358	03/30/01	Hoist #89 rope came out work stoppage
105366	03/30/01	Overhead hoist will not traverse, please check, and repair. Send to 65200 electrical shop.
105424	03/30/01	Attn 65500: little grievance hoist 394-festoon wiring snags on hot rail supports when hoist is on hot rail side. Re-adjust wiring loops.
105438	03/30/01	4000#hoist SN 88 has a broken hoist cable. This is a work stoppage situation

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
105510	04/02/01	Attn: shop 65500 - perform hook NDT on hoist 171 in T58 shop.
105517	04/02/01	Attn: shop 65500 - perform hook NDT on hoist 66. Blade shop.
105519	04/02/01	Attn: shop 65500 - perform hook NDT on hoist 69. Blade shop.
105527	04/02/01	Attn: shop 65500 - perform hook NDT on hoist 172. T58 shop.
105528	04/02/01	Attn: shop 65500 - perform hook NDT on hoist 173. T58 shop.
105541	04/02/01	Giant lift in clean room of fiberglass shop is out of capacity certification. Please recertify ASAP
105548	04/02/01	Attn: shop 65500 - perform hook NDT on hoist 221. Rotor head shop.
105549	04/02/01	Attn: shop 65500 - perform hook NDT on hoist 222. Rotor head shop.
105588	04/02/01	Attn: shop 65500 - perform hook NDT on hoist 336. Paint booth - old GSE shop.
105611	04/02/01	Attn: 65500. Hoists 121, 122, and 126. Remove old hooks replace with hooks that were taken from pizza hut budgets. Blend out any markings and NDT hooks remark with new hoist numbers.
105620	04/02/01	Attn: 65500. Hoist, Yale hoist J-79 shop. Remove wire rope coil and wire tie for transport to tandem loc as sample for new rope.
105642	04/03/01	4000 lb. hoist in J79 shop not working. Work stoppage.
105724	04/03/01	Hoist 255 not working. Please investigate. Thanks
105766	04/04/01	Attn 65500; hoist 255, plating shop check hot shoes, hoist not operating.
105894	04/05/01	Attn: 65500. Replace hook on hoist 121 with new ball bearing style hook.
105895	04/05/01	Attn: 65500. Replace hook on hoist 122 with new ball bearing style hook.
105896	04/05/01	Attn: 65500. Replace hook on hoist 126 with new ball bearing style hook.
105903	04/05/01	Work stoppage / hoist #383 in stripbar suddenly stopped and will not respond to controls/ please repair or replace ASAP
106033	04/06/01	Attn: 65500; hoist 383 welded gusset master. Reduce volume of oil thru oiler. Clean excess oil from holding brake. Intermittent problem with hoist working. Sometimes it does sometimes it doesn't possible sticky brakes
106040	04/06/01	Hoist #89, prop shop skipped track again work stoppage
106050	04/06/01	Clean or replace the control buttons for the overhead hoist in bldg 1798 components paint shop. The control buttons are sticking which creates a safety hazard when moving large parts.
106051	04/06/01	Inspect and repair (as necessary) the braking system on the overhead hoist in bldg 1798 components paint shop. The hoist continues to move on the rails after the control buttons are released. This is a safety hazard when moving large parts.
106155	04/09/01	Serial #184 rotor shop. The spring-loaded latch is broken. Hoist is down, work stoppage. Also a nut is missing.
106195	04/09/01	Hoist #221 adjust hoist holding brake .036
106196	04/09/01	Hoist #221 adjust bridge brake .031
106198	04/09/01	Hoist #221 tighten electrical connections in electrical panels
106200	04/09/01	Hoist #221 lubricate bridge drive and truck wheels
106201	04/09/01	Hoist #221 make hook block nuts flush with sheave shaft
106202	04/09/01	Hoist #222 tighten electrical connections in panels
106204	04/09/01	Hoist #222 tighten pendant wire connection at hoist

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
106205	04/09/01	Hoist #222 lubricate festoon wheels
106206	04/09/01	Hoist #222 lubricate bridge drive and truck wheels
106207	04/09/01	Hoist #222 repair intermittent brake coil action on west side of bridge. Attn: shop 65800
106208	04/09/01	Hoist #222 repair weighted upper limit switch
106211	04/09/01	Hoist #224 adjust upper and lower limit switch
106212	04/09/01	Hoist #224 clean glass beads and cadmium residue from exterior of hoist
106213	04/09/01	Hoist #224 tighten electrical connections in control box
106262	04/10/01	Hoist #287 located in the welding area of bldg 1798 is not working properly. One of the button is not working.
106324	04/10/01	Hoist 227 P&P paint room caut air pressure down on bridge travel to slow it down
106325	04/10/01	Hoist 227 P&P paint room clean push buttons on pendant control
106341	04/10/01	Perform load test on overhead parts conveyor in component paint shop, bldg 137.
106365	04/10/01	Please come and look at hoist #277 located in the x-ray vault. Hoist is leaking.
106378	04/10/01	This hoist continues an upward motion after releasing the up button.
106384	04/11/01	Hoist 88, bldg 421 J79/402 shop install new wire rope after getting it from tandem lock today first thing
106431	04/11/01	Hoist shoes came off rail.
106438	04/11/01	Hoist #308 in the F402 test cell is inoperative. Work stoppage.
106555	04/12/01	The control box to the overhead crane is cracked and separated. Hoist 294 the crane is locked and tagged out.
106595	04/12/01	Attn: 65500; hoist on stinkin green zyglo line, reset hot shoes
106596	04/12/01	Attn: 65500; hoist 308, single in 402 T/C reset hot shoe string broke, replace fuses
106598	04/12/01	Attn: 65500; hoist 294, middle area sheet metal shop/tail rework, repair/replace pendant control box.
106599	04/12/01	Attn: 65500; hoist 277 x ray vault bldg 188, check and repair leak. See for additional information
106602	04/12/01	Safety catch spring is broken on hoist #297. This hoist is essential equipment to operate in the shop. Please try and replace spring ASAP. Thank you
106631	04/13/01	Hoist #89 will not travel.....work stoppage
106696	04/13/01	Hoist #56 located in the CH-46 rotor head area is barely moving in the forward/reverse positions. Please note hoist #421 is also down and this will shut down 3/4 of 46 area. Please fix ASAP!! Thanks
106718	04/13/01	Hoist #89 will not go up or down. Send to 6.3.658
106763	04/16/01	Hoist #295 does not work (electric problem in control panel)
106768	04/16/01	Overhead hoist will not function properly in canning area.
106796	04/16/01	Hoist needs to be re-cert.
106800	04/16/01	Safety latch for the hook is bent. Needs to be replaced.
106801	04/16/01	No cert date on tag and safety latch on hook is weak.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
106832	04/17/01	Hoist in the welding area of bldg 1798 is not working properly. Two buttons on the control box is not working properly. Please send someone to repair ASAP.
106876	04/17/01	Hoist 295 sheetrock room replace broken pendant cover.
106877	04/17/01	Hoist 296 sheetrock room adjust time delay on bridge travel so it responds quicker.
106958	04/18/01	Hoist 287, P&P welding area, check or change bridge control button, two speed mouse tomb type
107029	04/18/01	Attn 65500. Re-do maintenance inspection. See 611 for new forms try to notice water filled control box and stripped shafts or wheels on geared limit switch.
107053	04/19/01	Hoists #29 in machine shop is hanging up. Needs to be adjusted
107078	04/19/01	Hoist 276 replace stripped upper limit, hoist located in the plating shop
107080	04/19/01	Requesting a load test on paint conveyor line system [overhead]
107204	04/20/01	Repair rebuild noisy gear box on hoist 336
107266	04/23/01	Attn: 65500 install replacement axle on hoist 421 in old GSE bldg See for details and axle.
107328	04/23/01	Hoist #77 in prop shop has a cracked control panel housing. Back panel.
107401	04/24/01	Hoist 91 P3 rubber room. Remove additional end stops relocate original end stops approximately 10 to 12 inches from wall so that bridge does not contact any fixed or movable obstructions other then end stops use existing bolts and stops redrill to mount.
107402	04/24/01	Hoist 2, located in relocated NDI area of old blade anodize room, blade area. Install manual hoist trolley using spares located in 650 can or on mezzanine in bldg 1007, hang hoist 2 on newly installed trolley. Notify 61100 upon completion
107459	04/24/01	Rail hoist in bldg 4188 malfunctioned & inoperable has engine & frame on hoist unable to lower engine. Work stoppage attn: day shift hoist team
107475	04/25/01	Fuse blown on overhead hoist
107502	04/25/01	Hoist 231, machine shop 133. Replace main line contactor and pendant wire.
107503	04/25/01	Hoist 111, bldg 188 west end. Replace runway hot shoes with cast iron shoes. Replace and extend pendant control wire. See for shoes
107506	04/25/01	Crane hoist #404 in E&E pool area has intermittent side to side movement. Work stop
107585	04/25/01	Hydrogen furnace hoist will not work. Furnace down, work stoppage. We need help soon please.
107596	04/25/01	Hydrogen furnace hoist will not work. Furnace down, work stoppage. We need help soon please.
107599	04/25/01	Cable on hoist crawling together and hard to move on rail. Thanks.
107637	04/26/01	Latches for elevator need repair. Will open easily if bumped by load. Repair latches. Thanks.
107712	04/26/01	Hoist #396 adjust southern most bridge brake
107713	04/26/01	Hoist #240 tighten monorail stanchion post nuts at floor
107714	04/26/01	Hoist #240 replace pneumatic separator/filter
107716	04/26/01	Hoist #174 attention 611 engineering hoist inspector advise lowly hoist people on condition of upper hook and nut

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
107725	04/26/01	Attn: 65500 engine carrier hoist in 402 test cell dead on line check hot shoes and replace fuses
107738	04/26/01	Need an electrician to fix the wires on the hoist in the exposure room wires pulling out
107739	04/26/01	Hoist #263 over our oil tank will not go up or down. We have a P-3 barrel hanging in mid-air from it now. Thanks
107741	04/26/01	Need an electrician to fix the wires on the hoist in the exposure room wires pulling out
107742	04/26/01	Repair push button rubber, and replace missing hardware in pendent control. No: 293
107767	04/27/01	Buttons on pendant controller are missing their protective rubber coverings-crane #293
107769	04/27/01	Runway 28 preservation clamshelter #2 main door cable is frayed
107791	04/27/01	Attn: 65500: trouble shoot and repair hoist 65; won't trolley.
107792	04/27/01	Attn: 65500: hoist 66 remove wire rope and inspect then rev to eliminate any twists.
107796	04/27/01	Attn: 65500: replace pendant cable on hoist 404 in E&E room next to paint area, building 133. Also check festoon wire and junction box for bad connections/damaged wires. Hoist wouldn't trolley so I wiggled the pendant wire and it started working again.
107798	04/27/01	Elevator in main shop area across from bosses office door keep coming off hinge needs repair or replace safety hazardous
107833	04/27/01	Hoist number 65 inoperable. Need repaired.
107838	04/27/01	Hoist #174 lower hook nut has a loose fit, contact inspector for consultation
107864	04/30/01	Attn: 65500. Hoist 402, ASKARS extension, replace wire rope assembly.
107865	04/30/01	Attn: 65500. Hoist 402, ASKARS extension, replace tension wire rope type festoon system with insul eight C-channel and top bracket style
107883	04/30/01	Attn: 65500: perform hook NDT on hoist 339
107892	04/30/01	Attn: 65500: perform hook NDT on hoist 338
108021	05/01/01	Attn: 65500 - perform hook NDT on hoist 146.
108043	05/01/01	Pallet jack inoperable. Will not lift.
108091	05/01/01	Crane 243 over the Cincinnati 5 axis mill has the power buss bars which have jumped off the supports.
108170	05/02/01	Runway 28 preservation clamshelter #2 main door cable is frayed
108228	05/03/01	Air hose has become disconnected from hoist in walk-in blaster. Needs to be reclamped. Work stoppage
108312	05/04/01	Leaking oil (great amounts)
108346	05/04/01	Overhead crane #48 in H-53 hangar out of service due erratic movement does not respond properly to controls. Work stoppage
108382	05/04/01	Hoist has blown another fuse
108393	05/04/01	Attn: 65500: fix oil leak on right bridge drive for hoist 393.
108487	05/07/01	Hoist #407 install lockable disconnect, paint orange and identify with hoist number
108510	05/07/01	Attn: 65500: perform hook NDT on hoist 206.
108515	05/07/01	Attn: 65500: perform hook NDT on hoist 318.
108516	05/07/01	Attn: 65500: perform hook NDT on hoist 317.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
108543	05/07/01	Crane #24 need new hook and latch and #Put on it so you can see it from the floor old paint side
108544	05/07/01	Crane #239 need new hook and #Put on it so you can see it from the floor old paint side
108548	05/07/01	Crane #16 need #put on it so you can see it from the floor on the prep side
108549	05/07/01	Crane #11 need #put on it so you can see it from the floor on prep side
108559	05/07/01	Paint shop hoist 286 by treat tanks not picking up a load
108651	05/08/01	Hoist #34 trolley drive set screws loose on chain drive sprocket, tighten set screws
108652	05/08/01	Hoist #34 bridge drive set screws loose on both tractor chain drive sprockets, tighten set screws
108653	05/08/01	Hoist #34 tighten retaining nut on strain relief connector
108655	05/08/01	Hoist #34 check lube and grease all zerk fittings
108656	05/08/01	Overhead crane #49 does not move (trolley) work stoppage
108730	05/09/01	Attention 652:inspect bridge crane #248 in robotic shotpeen room
108733	05/09/01	High limit switch improperly set. Hoist no longer goes high enough to lift props to cold roll machine. See bates for details. This hoist is actually located in 94301 blade shop.
108734	05/09/01	4000#overhead hoist has broken cable; this is a work stoppage situation.
108741	05/09/01	Hoist #174 was red tagged by QA saying it is out of calibration. Hoist shop just worked this the other day. Work stoppage until this is taken care of. The sticker on the wall is missing. Thanks
108757	05/09/01	2 hoists #174 & #31 show out of date certificates please correct this. Shop 96556
108760	05/09/01	2 of the hoists in test cell area will be out of calibration by 11 may please check and test them. Thanks shop 96556
108795	05/09/01	Load test all VLCs in preparation for upcoming IG inspection.
108828	05/10/01	Attn: 65500: inspect all VLCs for upcoming IG inspection see ticket #108795.
108919	05/10/01	Hoist #397 tighten gear box cover bolts
108920	05/10/01	Hoist #397 tighten trolley mounting bolts
108921	05/10/01	Hoist #397 tighten control box bolts
108923	05/10/01	Hoist #397 align bridge drive wheel on drive shaft
108924	05/10/01	Hoist #397 grease zerk fittings on bridge and trolley drive hardware
109005	05/11/01	Air hoist #174 needs chain directed into catch can.
109052	05/11/01	Overhead #49 in H-53 hangar. Hoist does not move in trolley position.
109077	05/11/01	Attn 65500: hoist 241 would not hold test weight. Cleaned disk and adjusted brake but still no good. Currently tagged out.
109102	05/14/01	Attn 65500: hoist 49 in H-53 hangar won't trolley. Everything else works.
109107	05/14/01	Vertical lift in prop shop rubber bonding room. Down button on second floor controls not working
109177	05/14/01	Need stop put on hoist #M12076 so it will not run into new blasting machine!
109205	05/14/01	Air line dropped. Work stoppage. Thanks.
109318	05/15/01	Hoist inoperable and certification tag need to be replaced, a section missing. Work stoppage

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
109319	05/15/01	Hoist inoperable and certification tag need to be replaced, a section missing. Work stoppage
109370	05/16/01	Hoist #12 shorten knotted pendant wire
109371	05/16/01	Hoist #12 tighten pendant switch mounting screws
109374	05/16/01	Runway 28 preservation clamshell #1 door cable needs repairing or replacing. Must have extendable lift to reach.
109376	05/16/01	Runway 28 preservation clamshell #1 door cable needs repairing or replacing. Must have extendable lift to reach.
109407	05/16/01	Hoist-grind the weld on the hoist rail flat.
109422	05/16/01	Identify and load test new hoist in T-400 shop. Also we need an air supply to operate hoist.
109435	05/16/01	Overhead hoist at 1794 won't work.
109534	05/17/01	Chain box on hoist 356 has fallen down and needs to be re-secured to hoist. Outside test cells 11 and 12
109679	05/21/01	Hoist inoperable work stop
109729	05/21/01	Overhead hoist #49 will not move in trolley position, second call. First ticket #109052 submitted 5/11/01.
109738	05/21/01	Air hoist over stand 2 in F402 shop is red tagged we need to use this stand please send someone to check out this hoist ASAP. Holding up work in shop thanks.
109802	05/21/01	Hoist SN 88 is inoperable, this is a work stoppage situation.
109817	05/21/01	Hoist #173 T-400 area safety clip is broken. Also needs a larger hook for t64 engine.
109819	05/21/01	Repair hoist F402 test cell. Attn: 2nd shift.
109867	05/22/01	Repair hoist 48 trolley inoperable.
109892	05/22/01	Work stoppage, work stoppage 3 hoists #'s 153, 207, 215 located in power plant section in 133 pt line will not work. Cannot run line without hoist. Please come quickly.
109932	05/22/01	Hoist #199 festoon wire rope loose on jib
109934	05/22/01	Hoist #199 360 degree electrical connector box sticking on top of jib
109953	05/22/01	The 6000 lb. hoist over the Cincinnati mill in 93552 has an electrical buss that has dropped down, please repair
109960	05/22/01	The 6000 lb. hoist over the Cincinnati mill in 93552 has an electrical buss that has dropped down, please repair
110019	05/23/01	Attn: 655- hoist 48 won't trolley. 53 hangar.
110023	05/23/01	Attn: 655- relocate 317 from test cell 6 to engine shop 96555 on bridge next to 163. Shorten chain as per shop supervisor.
110037	05/23/01	Hoist #235 trolley stop at jib column missing, hoist case strikes column.
110038	05/23/01	Hoist #235 brake air gap unbalanced, askew.
110039	05/23/01	Hoist #235 festoon wiring snagged on trolley preventing full travel of hoist.
110040	05/23/01	Hoist #235 e-stop button switch, retaining nut loose.
110043	05/23/01	Control panel is falling apart on hoist#296 in main gearbox assembly area could be safety factor please help!!
110093	05/23/01	Hoist #166 in corrosion barn is out of calibration/ please calibrate

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
110110	05/24/01	Attn: 65500: hoist 190 in test cell 3 needs weld ground flat for trolley wheels. Coordinate with shop so they can get everything covered up in test cell.
110207	05/24/01	Relocate various hoists as discussed earlier.
110263	05/25/01	Hoist 263 in plating shop quit.
110267	05/25/01	Work stoppage hoist #207 locked up and will not move. Unable to move others past that one. Please come and repair so we can get back to work.
110290	05/25/01	Attn: 65500: hoist 296, needs new pendant cover, badly cracked and coming apart.
110292	05/25/01	Attn: 65500: hoist 243, hot rail supports broken and rail is hanging. Shoe has jumped track.
110293	05/25/01	Attn: 65500: hoist 207, hot shoe keeps jumping off track. Replace damaged shoe.
110300	05/25/01	Crane in the shotpeen area of the prop shop, has a bad switch
110346	05/29/01	Attn: 65500: perform hook NDT on hoist #84
110400	05/29/01	Attn: 65500: move end stop so hoist 240 doesn't run into new blast booth.
110425	05/29/01	Work stoppage. All 5 hoist down. One arced, sparked, and blew the breaker and all are down. Please check and repair. Currently line completely down.
110642	05/31/01	Switch #1 will not activate
110660	05/31/01	Hoist #210 lubricate zerk fittings on trolley wheels
110661	05/31/01	Hoist #210 lubricate rusted load chain
110662	05/31/01	Hoist #210 clean and repair airline oiler, add oil as required
110664	05/31/01	Hoist #378 magnetic air gap on holding brake askew
110666	05/31/01	Hoist #378 pendant control e-stop button not working
110667	05/31/01	Hoist #378 reattach pendant control to strain relief cable
110723	05/31/01	New chain hoist installed on rail #13 in bldg 133, T-400 engine build-up area of shop 96555 needs to be load tested/certified for use.
110771	06/01/01	Check and repair elevator push button switch.
110778	06/01/01	Overhead hoist 376 - cables came off. Located in H-53 small gearbox shop
110799	06/01/01	Attn: 65500: move in line oiler to level even with or above hoist 416 on the jack tester.
110886	06/04/01	Attn: 65500: hoist 188 in test cell 1 will not hold test load.
110888	06/04/01	Attn: 65500: hoist 376 tangled wire rope. Inspect wire rope, re-rev, and inspect/adjust limit switches if available.
110891	06/04/01	Attn: 65500: hoist 188 mount end stop on shop end of monorail. None there presently.
110943	06/04/01	Leaking oil, very slippery areas
110951	06/04/01	Attn: 655. Install in-line oiler on hoist 210.
110977	06/05/01	Attn: 655: hoist 393 leaking oil from bridge drive.
111053	06/05/01	2 pallet jacks located in this shop needs maintenance because one lifts only a few inches and the other doesn't lift at all. Workload dictates that this be done ASAP.
111088	06/05/01	F402 test cell hoist #241 will not lower at faster speed.
111089	06/05/01	F402 test cell hoist #241 will not lower at faster speed.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
111285	06/07/01	Overhead hoist #46 bridge will not move. Need help with this problem as soon as possible.
111350	06/07/01	Hoist #251 is leaking oil on our parts and in our plating tanks. This is a serious problem and needs attention ASAP. Thanks
111352	06/07/01	Hoist #251 is leaking oil on our parts and in our plating tanks. This is a serious problem and needs attention ASAP. Thanks
111405	06/08/01	Attn 655: perform hook NDT on hoist 350
111513	06/11/01	Attn 652: fix leak on hoist 251 in plating shop
111564	06/11/01	Hoist #297 adjust trolley brake
111566	06/11/01	Hoist #297 adjust west bridge brake
111568	06/11/01	Hoist #297 adjust east bridge brake
111569	06/11/01	Hoist #297 adjust hoist holding brake
111570	06/11/01	Hoist #294 adjust west bridge brake
111571	06/11/01	Hoist #294 adjust east bridge brake
111572	06/11/01	Hoist #294 adjust trolley brake
111574	06/11/01	Hoist #300 adjust hoist brake
111575	06/11/01	Hoist #300 replace wire rope
111576	06/11/01	Hoist #301 replace upper lower geared limit drive
111577	06/11/01	Hoist #301 adjust hoist holding brake, is askew
111615	06/11/01	Attn 655 or 652: need person to assist condition inspector/load test director during load tests on 6-12-01 and 6-13-01. Must have forklift license.
111685	06/12/01	Overhead hoist #46 bridge will not move. need help with this problem as soon as possible. Work stoppage
111711	06/12/01	Hoist controls do not work as far as the up and down movement or fwd or aft on rail hoist is down and at a work stoppage for the work center.
111729	06/12/01	Hoist #299 holding brake askew by .004 "
111730	06/12/01	Hoist #299 west bridge brake out of tolerance
111731	06/12/01	Hoist #299 east bridge brake out of tolerance
111732	06/12/01	Hoist #299 trolley brake out of tolerance
111733	06/12/01	Hoist #299 pendant wire connector loose at pendant
111734	06/12/01	Hoist #299 pendant wire loop hanging loose
111735	06/12/01	Hoist #295 north bridge brake out of tolerance
111736	06/12/01	Hoist #295 trolley brake out of tolerance
111737	06/12/01	Hoist #295 bridge control box has loose electrical connections
111752	06/12/01	Hoist #260 has a sticky button causing problems with getting parts in and out of the plating tank. We already have another hoist down on this line, that ticket #is 111350. We need help, thanks
111773	06/13/01	Attn: 655 hoist 89 won't go up or down and loss of travel
111779	06/13/01	Hoist #298 south bridge brake out of tolerance
111781	06/13/01	Hoist #298 east holding brake out of tolerance and dirty
111782	06/13/01	Hoist #298 brake cover hardware missing replace
111783	06/13/01	Hoist #298 order holding brake discs

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
111813	06/13/01	Hoist #296 pendant control cover damaged and cracked like an egg
111814	06/13/01	Hoist #296 holding brake askew by .004"
111815	06/13/01	Hoist #296 trolley brake out of tolerance
111816	06/13/01	Hoist #296 north bridge brake out of tolerance
111817	06/13/01	Hoist #296 festoon connector nut loose on bridge control box
111901	06/14/01	Hoist #299 wire rope found damaged during annual inspection. Order wire rope.
111902	06/14/01	Hoist #300 wire rope found damaged during annual inspection. Order wire rope.
111921	06/14/01	Crane 379 is missing certification tag.
111922	06/14/01	Hoist number 66 missing certification tag.
111925	06/14/01	Hoist number 212 is missing certification tag.
111926	06/14/01	Hoist number 58, upper limit switch not working correctly.
111956	06/14/01	Hoist #201 order parts for engine test cell maintenance hoist
112027	06/15/01	Crane #43 has squeaking wheel. Needs to be serviced. Will be used continuously in the next few days due to lead pour operations. Will cause work stoppage if not corrected. See for location.
112167	06/18/01	The hoist sometimes will not go up or down. Other directions are ok. This hoist is less than two month old.
112186	06/18/01	The hoist sometimes will not go up or down. Other directions are ok. This hoist is less than two month old.
112211	06/18/01	Work stoppage. Hoist #415 has been modified and now needs to be load tested. Cannot operate until certified. Unable to work heavy parts in that area. Thank you
112269	06/19/01	Work stoppage. Hoist #415 has been modified and now needs to be load tested. Cannot operate until certified. Unable to work heavy parts in that area. Thank you
112271	06/19/01	Hoist number 212 is missing certification tag.
112272	06/19/01	Crane 379 is missing certification tag.
112273	06/19/01	Hoist number 66 missing certification tag.
112344	06/19/01	Outside hoist leaking oil.
112404	06/20/01	Assist shop 65500/II to install signs
112481	06/21/01	Hoist 271, plating shop. Replace wire rope p/n 15044086 ordered 3/12/01 certification received 4/27/01 parts came in with small hanger clamps wire rope in 1006
112503	06/21/01	Hoist 399, Yale ACL that was removed from avery's corrosion barn and rode around awhile on little cart, locate hoist and repair sticking control lever so it will lower properly. Then reinstall on monorail in 424
112617	06/22/01	Attn: 652: install new air shut off valve on air supply to hoist 426 or put handle on existing valve.
112838	06/26/01	Hoist 232, AV8 hush hoist monorail. Remove hook and have NDT performed, reinstall hook
112845	06/26/01	Hoist 1, bldg 133 test cell 3. Remove hooks and have NDT performed reinstall hooks
112859	06/26/01	Hoist 45. H53 hangar check lube levels and grease all fittings
112860	06/26/01	Hoist 45. H53 hangar order and install OEM end stops at wall end of bridge.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
112861	06/26/01	Hoist 46. H53 hangar order and install OEM end stops at wall end of bridge.
112862	06/26/01	Hoist 46. H53 hangar replace bolts in brake cover ends are stripped
112863	06/26/01	Hoist 46. H53 hangar tighten electrical connections in hoist control cabinet
112864	06/26/01	Hoist 46. H53 hangar check fluid levels and lube all fittings
112865	06/26/01	Hoist 49. H53 hangar check fluid levels and lube all fittings
112866	06/26/01	Hoist 48. H53 hangar check fluid levels and lube all fittings
112867	06/26/01	Hoist 49. H53 hangar adjust lower limit to keep block from hitting floor
112868	06/26/01	Hoist 48. H53 hangar adjust lower limit to keep block from hitting floor
112869	06/26/01	Hoist 48. H53 hangar replace missing lock nut on pendant bridge switch
112871	06/26/01	Hoist 49. H53 hangar replace missing lock nut on pendant trolley switch
112872	06/26/01	Hoist 49. H53 hangar reset holding brake air gap to .035"
112873	06/26/01	Hoist 49. H53 hangar install OEM end stops on bridge
112874	06/26/01	Hoist 48. H53 hangar install OEM end stops on bridge
112875	06/26/01	Hoist 48. H53 hangar check and tighten electrical connections in hoist/trolley control box
113014	06/28/01	Hoist #48 in the H-53 hanger will not move from side to side.
113190	06/29/01	Work stoppage. Bridge number 3 in the pneumatics test cell (pizza hut) is down. Check for possible crane accident.
113328	07/02/01	Bridge crane #402 emergency stop not functioning properly.
113331	07/02/01	Hoist 373, new for NADEP, bridge crane in hangar area of 1665, borrowed marine hangar. Establish hoist folder. Measure components and record on hoist data sheet.
113333	07/02/01	Hoist 373, bldg 1665 borrowed marine hangar. Identify hook and establish base tram measurement. Record on hook data sheet
113334	07/02/01	Hoist 373, bldg 1665 borrowed marine hangar. Remove hook have NDT performed establish NDT record card
113336	07/02/01	Hoist 373, bldg 1665 borrowed marine hangar. Label hoist and bridge with hoist number and capacity. Identify directions of travel to correspond with pendant markings
113338	07/02/01	Hoist number-263 will not go up or down. This is the only hoist over the oil tank. Parts are waiting to be processed. Thanks
113348	07/02/01	Hoist 90, c-scan monorail rewire controls to enable two speed hoist operation. Parts received and are in bldg 1006.
113371	07/02/01	Hoist number-263 will not go up or down. This is the only hoist over the oil tank. Parts are waiting to be processed. Thanks
113397	07/03/01	Hoist #263 will not go up and down - work stoppage
113418	07/03/01	Hoist 117, propeller/fiberglass shop, replace wiring from step down transformer to hot rail connections replace and reconnect ground wire to system. Use #8 wire for connections. Save old wire for inspection
113433	07/03/01	On hoist 216 replace rubber grommet on pendant cable and insulation on pendant button.
113497	07/05/01	Hoist in steam rack will not work. Work stoppage
113512	07/05/01	294, will not go down, work stoppage
113533	07/05/01	Pull chain on hoist 318 needs lengthening.
113613	07/06/01	Install inline oiler on hoist 189 in test cell 2.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
113614	07/06/01	Install inline oiler on hoist 187 in test cell 6. Also install proper end stop in place of bolts on door end of monorail.
113615	07/06/01	NDT hook for hoist 189 in test cell 2
113622	07/06/01	Bent hook lock on hoist #101 in machine shop.
113623	07/06/01	Spring is broken on #103 hoist block. POC is in machine shop.
113659	07/09/01	2 hoists on one side of the hangar will not work, work stoppage
113676	07/09/01	Overhead hoists #45 and 49 both inoperable (no power) work stoppage.
113691	07/09/01	Requesting the control box cable be extended.
113692	07/09/01	Requesting support cable for control box be repaired.
113693	07/09/01	Hoist leaks oil.
113754	07/10/01	Hoist #299 quit it will not travel on the beam major work stop. Please help thank you
113773	07/10/01	NDT hook on hoist 239
113774	07/10/01	Deliver 2500 lb test weight to paint hangar for load tests
113850	07/10/01	Hoist #129 inoperable.
113866	07/11/01	Trolley brake on hoist 299 will not release. Hoist down.
113914	07/11/01	Hoist #263 is not working properly. The hoist is located over the oil tank area. Thanks
113925	07/11/01	Hoist #119 load chain bucket hanger has missing nut, replace nut and lock nut.
113927	07/11/01	Hoist #119 paint hoist electrical disconnect orange.
113928	07/11/01	Hoist #119 tighten screws on hand pendant case.
113930	07/11/01	Hoist #119 install jib boom stops, contact engineering for assistance.
113931	07/11/01	Hoist #77 adjust hoist holding brake as per OEM specs
113932	07/11/01	Hoist #77 tighten a cog swalley of loose connections in control box for hoist and trolley.
113933	07/11/01	Hoist #77 grease bridge drive shaft bearings.
113934	07/11/01	Hoist #77 tighten hoist gear box cover bolts.
113935	07/11/01	Hoist #77 tighten bolts on rail joint scab plate.
113937	07/11/01	Hoist #77 increase tension on south bridge drive wheel adjuster.
113965	07/11/01	Hoist went past limit switch. Cable is off track on drum. Hoist is not usable.
113973	07/11/01	Buttons stick need to be checked.
113987	07/11/01	Hoist 24 in paint hangar failed condition inspection. Trolley plunger sticks causing to trolley to keep moving when control is released.
113990	07/11/01	Hoist #313 adjust holding brake to OEM specs.
113991	07/11/01	Hoist #313 NDT hook, upper and lower.
113992	07/11/01	Hoist #313 repair emergency stop switch on pendant controller
114013	07/12/01	P-307 trained mechanic needed to assist in load testing on 7-12-2001.
114033	07/12/01	Hoist #393 leaking oil
114056	07/12/01	Requesting that the cables that support the control boxes be insulated. Requesting the insulation so that the risk of shock or grounding around the anodize tank is minimized.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
114091	07/12/01	Urgent- hoist 406, sling tester, has cover missing, needs end stops installed, and smokes under a load.
114115	07/12/01	Hoist #401 adjust lower limit switch.
114202	07/13/01	Hoist 401 137 machine shop, tall gorbel type jib. Install lockable & accessible disconnect switch for hoist
114203	07/13/01	Hoist 313 137 machine shop, C&M jib by relocated water jet cutter. Reset lower limit to keep hook from hitting floor
114216	07/13/01	Inspect jib #119 for damage. Designed for 1000#, but rated/tested at 2000#. (1) check jib beam for straightness. (2) check jib beam connection. If welded, perform MT inspection of weld. If bolted, check bolt threads for damage. Call when done.
114217	07/13/01	Hoist number 99, the up button is sticking and is a safety hazard. Needs immediate attention.
114222	07/13/01	Hoist 96 converted sanding booth H53 rotor blade shop reroute supply air piping to make a disconnect valve at floor level available to operator.
114278	07/16/01	Hoist 134, H-46 hangar install factory type end stop on bridge rail end closest to center of hangar. Do not weld, use grade 5 or better nuts and bolts as per alt mod.
114346	07/17/01	Latch on hoist needs repair
114357	07/17/01	Overhead hoist #348 has a button cover missing on the trolley left control button, exposing bare metal. This presents a potential shock hazard if the hoist should short circuit. Please repair/replace button.
114416	07/17/01	Hoist #26 disassemble brake and clean disc's and other parts.
114437	07/18/01	I went to use the hoist this morning and there's no power. Thanks.
114461	07/18/01	Hoist 145 is missing certification tag on control box
114464	07/18/01	Cancel hoist ticket someone shut the power off, sorry.
114489	07/18/01	Hoist #1 internal gearing has inadequate lubrication
114490	07/18/01	Hoist #1 chain measurement not indicating the correct amount of links for proper P307 measurement.
114493	07/18/01	Hoist #1 remove hoist from trolley. Remove upper and lower hook assembly. Clean hook assemblies. Carry to NDT personnel for testing. Lubricate hook assemblies. Install hook assemblies on hoist. Reattach hoist to trolley.
114530	07/18/01	Hoist 119 in heat treat room needs brakes inspected. No data was available at the time of maintenance inspection. Inspect per maintenance manual in hoist folder, record measurements then notify test director.
114551	07/18/01	Hoist #232 re-gauge chain measurement to 14 links
114552	07/18/01	Hoist #232 disassemble hoist and lube gearing
114596	07/19/01	Perform hook NDT on hoist 341
114607	07/19/01	Perform hook NDT on hoist 340
114722	07/20/01	Provide mechanic to assist in load tests 7-20-2001
114779	07/20/01	Hoist #231 adjust holding brake air gap to .015".
114780	07/20/01	Hoist #231 grease zerk fittings
114812	07/21/01	Hoist #68 will not go side to side work stoppage. EIN 006855
114996	07/24/01	I need to look at hoist 145 and 134 in hanger 3 of building 137. I need to have a maintenance person lift me up so I can inspect the electrical parts of these hoists.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
114997	07/24/01	Hoist has dead spot when you trolley from center to wall or wall to center.
115012	07/24/01	Hoist #366 holding brake out of adjustment, adjust as per OEM specs.
115013	07/24/01	Hoist #366 multiple loose electrical connections in control box, check and correct.
115014	07/24/01	Hoist #366 hoist trolley motor mounting bolts loose, tighten.
115016	07/24/01	Hoist #366 hoist trolley gear box cover bolts loose, tighten.
115018	07/24/01	Hoist #366 hoist trolley brake out of OEM specs. Adjust to dimension.
115019	07/24/01	Hoist #365 hoist trolley brake out of OEM specs. Adjust to dimension.
115020	07/24/01	Hoist #365 hoist trolley motor mounting bolts loose, tighten.
115021	07/24/01	Hoist #365 multiple loose electrical connections in control box, tighten same.
115022	07/24/01	Hoist #365 trolley gear box cover bolts loose, tighten
115025	07/24/01	Hoist #369 trolley motor bolts loose, tighten
115030	07/24/01	Hoist #369 multiple loose electrical connections in control box.
115031	07/24/01	Hoist #370 multiple loose electrical connections in control box.
115032	07/24/01	Hoist #370 trolley drive motor bolts loose, tighten.
115047	07/24/01	Button cover still missing on hoist #348. Second call reference ticket #114357.
115053	07/24/01	Overhead hoist #348 has a button cover missing on the trolley left control button, exposing bare metal. This presents a potential shock hazard if the hoist should short circuit. Please repair/replace button.
115059	07/24/01	Hoist #365 hoist trolley brake out of OEM specs. Adjust to dimension.
115093	07/24/01	Hoist won't trolley work stoppage!!!
115095	07/24/01	Hoist #89 will not work, work stoppage.
115096	07/24/01	Hoist #68 will not work, work stoppage. EIN 006855
115115	07/25/01	Adjust travel limits on chains for engine carriers in pizza hut so carriers will not run into hoist or touch floor.
115199	07/25/01	Hoist #367 tighten a cog swalley of electrical connections in control box.
115201	07/25/01	Hoist #367 tighten a cog swalley of electrical connections in trolley control box.
115202	07/25/01	Hoist #367 tighten greenfield conduit connector nut at trolley control box.
115203	07/25/01	Hoist #367 tighten trolley motor mounting bolts
115205	07/25/01	Hoist #367 tighten trolley gear box cover bolts
115206	07/25/01	Hoist #367 adjust holding brake air gap. Adjust to line
115207	07/25/01	Hoist #368 adjust holding brake air gap. Adjust to line
115208	07/25/01	Hoist #368 tighten electrical connection in hoist control box.
115209	07/25/01	Hoist #368 tighten electrical connection in trolley control box.
115210	07/25/01	Hoist #368 tighten electrical connection in trolley control box.
115220	07/25/01	Hoist #129 would not move in reverse on bridge.
115252	07/26/01	Hoist is off track. ID #129 aft disassembly area, at a work stoppage.
115331	07/26/01	Need to repair hoist #207 on penetrant line stopped working work stoppage

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
115392	07/27/01	Check hoist in canning area of shop 94405 check movement on rail. And shorten control handle cable hoist #350
115569	07/31/01	Please replace cover on F-406 engine assembly stand. Attn. 65200
115573	07/31/01	Air line to hoists broke
115601	07/31/01	Hoist #306 brake hub rubbing on inside of brake housing cover. Move brake hub to dimension noted in OEM manual of 1.62".
115602	07/31/01	Hoist #306 trolley brake needs to be adjusted to OEM spec of .040" to .045"
115603	07/31/01	Hoist #306 trolley drive wheel starting to deteriorate, order replacement wheel.
115605	07/31/01	Hoist #306 pendant control, e-stop button, rubber dust cover missing, order dust cover.
115607	07/31/01	New hook and nut for hoist 174- mark both with hoist number, NDT, and install. Notify when finished.
115609	07/31/01	Hoist #306 wire rope, wear approaching limit, order replacement wire rope.
115610	07/31/01	Hoist #307 wire rope, wear approaching limit, order replacement wire rope.
115612	07/31/01	Hoist #307 trolley brake out of OEM tolerance, adjust within .040" to .045".
115614	07/31/01	Hoist #307 trolley drive wheel starting to deteriorate, order drive wheel.
115615	07/31/01	Hoist 110- shop complaining of intermittent functioning of push buttons and lower limit switch not working.
115616	07/31/01	Hoist 112- shop complaining of intermittent functioning of push buttons and lower limit switch not working.
115647	07/31/01	Repair tapped holes to mount cover on hoist 403, sling tester.
115656	07/31/01	Need to fix hoist 207 in NDI shop. Hoist hung up and will not move work stoppage
115706	08/01/01	Hoist #111 trolley drive wheel deteriorating, rubber cracked and getting ready to let go. Order drive wheel, 9" x 1 3/8", no part #available.
115709	08/01/01	Hoist #111 lubricate bridge drive shaft bearings and trolley wheels.
115716	08/01/01	Hoist #111 control box has 37 electrical connections that need to be tightened, just a little.
115717	08/01/01	Hoist #111 hoist hot shoes have surface corrosion and accumulated dirt on the contact surface. Remove wheels from candelabra clean and replace to same.
115718	08/01/01	Hoist #111 bridge hot shoes worn and carbon shoe holder damaged. Replace with new hot shoe bracket and new carbon hot shoes and holder.
115842	08/02/01	Hoist #211 holding brake askew, adjust to OEM spec.
115843	08/02/01	Hoist #213 holding brake askew, adjust to OEM spec.
115888	08/02/01	Need to repair hoist #207 on penetrant line. Sparks from hoist work stoppage
115922	08/03/01	Mark the hook and hook nut on bridge crane 373 with the hoist number (373) in a way that does not damage the hook and nut.
115965	08/03/01	Repair or replace pendant - hole where e-stop used to be and push button covers missing. Will not pass condition inspection. Notify when complete.
115974	08/03/01	Hoist 216. Install rubber grommet or other necessary accepted hardware to prevent chafing and possible short where pendant cable enters hoist housing. Notify for condition inspection/load test when complete.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
115988	08/03/01	We have problems with two hoist, 1-#156mon manual line NDI large line has a cracked control box. This is used around liquids. 2--same line, new hoist no number on it-does not have a cable for pulling it around, just the electric cord-thanks
116043	08/06/01	Hoist #99 airline lubricator adjustment for flow is inadequate, adjust lubricator to produce desired amount of lubrication so as to protect the hoist in it's outdoor location, plus internally lubricate the hoist as per OEM specs.
116044	08/06/01	Hoist #99 lubricate all mechanical connections and moving parts on the exterior of the hoist. Wipe down hoist to prevent over leakage on operator.
116046	08/06/01	Hoist #99 check and tighten as required all column support post base hardware.
116103	08/06/01	Hoist #117 is broken down work stoppage
116215	08/07/01	Hoist #117 will not go up and down work stoppage.
116492	08/10/01	Safety / emergency shut off for new bridge crane is not labeled/ please label IAW safety instructions.
116524	08/10/01	Hoist #380 lubricate zerk fittings on bridge drive and trolley
116526	08/10/01	Hoist #380 holding brake air gap askew, adjusted to .033".
116528	08/10/01	Hoist #380 loose electrical connections in hoist control box.
116529	08/10/01	Hoist #380 floating pendant trolley car that is driven by hoist has allowed the pendant wire to seep past the crimping connection. Disassemble and repair.
116531	08/10/01	Hoist #381 hoist trolley brake coil has destroyed itself. Remove brake assembly, check for damage and clean. Replace bad coil with new one and adjust plunger air gap as per OEM specs.
116533	08/10/01	Hoist #381 electrical conduit at hoist loose, tighten.
116535	08/10/01	Hoist #381 grease zerk fittings on bridge and trolley drive assy.
116550	08/10/01	Hoist #381 bridge bumper bad. Bashed, broken, busted.
116610	08/13/01	Hoist #231 in shop quit working
116672	08/13/01	Hoist 380 needs 2 block-switch connected and functioning. Set variable speed drive so trolley stops a little quicker. Shop complaining about it costs.
116680	08/13/01	Hoist 381 needs 2 block-switch connected and functioning (see how 380 works before doing it to this one, there may be a reason it wasn't done before). Set variable speed drive so bridge operates more smoothly. Compare to 380 for reference.
116693	08/13/01	Overhead hoist #49 in the H-53 hangar will not respond to input from control panel to move toward "wall" with a load. Work stoppage.
116767	08/14/01	Hoist #231 will not start, may be an electrical problem.
116828	08/14/01	Hoist number 70 leaks oil. Need repaired.
116829	08/14/01	Hoist number 58 need cable support repaired.
116831	08/14/01	Hoist number 379 missing certification tag.
116832	08/14/01	Hoist number 66 needs certification tag replaced.
116834	08/14/01	Hoist number 212 certification tag missing, need to have it replaced.
116855	08/14/01	Work stoppage hoist #207 shorted out need an electrician
116857	08/14/01	Hoist #68 will not go side-to-side work stoppage.
116931	08/15/01	Hoist #101 lubricate trolley and bridge wheels
116932	08/15/01	Hoist #102 lubricate trolley and bridge wheels

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
116933	08/15/01	Hoist #103 lubricate trolley and bridge wheels
116934	08/15/01	Hoist #103 lubricate internal gearing assembly
116936	08/15/01	Hoist #102 lubricate internal gearing assembly
116937	08/15/01	Hoist #101 lubricate internal gearing assembly
116940	08/15/01	Hoist #103 hook latch on lower hook broken, replace hook latch
116963	08/15/01	Overhead hoist 89 cable has a two flay spots and a fry in cable this is dangerous shop is at work stoppage for that area because hoist cable is bad
116977	08/15/01	Hoist #340 nuts on floor flanges at pillar bases loose. Tighten nuts
116978	08/15/01	Trouble shoot hoist 117 to find out why it won't lift rated load.
116984	08/15/01	Hoist #89 will not go up or down work stoppage.
117082	08/16/01	Hoist #243 sheet metal cover on hook block bent and has loose screws. Straighten cover and tighten loose screws.
117084	08/16/01	Hoist #243 upper limit switch set to trip to early. Reset switch so as to make switch trip just before 2-block switch.
117086	08/16/01	Hoist #243 lower limit switch stops hook 12.250" before floor. Reset switch to a lower limit.
117087	08/16/01	Hoist #243 upper lower limit switch bracket loose. Tighten bracket.
117088	08/16/01	Hoist #243 trolley brake needs to be adjusted.
117089	08/16/01	Hoist #243 south bridge drive brake assembly rusty and dirty. Clean, lap, brake disc back up plates. Reassemble and reset air gap.
117091	08/16/01	Hoist #243 order brake discs for bridge drives. 6.820" OD, .260" thk, 1.750" across the flats on a hex cut out ID for the brake hub. Unknown manufacturer
117092	08/16/01	Hoist #243 adjust askew brake air gap on north bridge drive.
117093	08/16/01	Hoist #243 grease open drive gear on bridge drive wheel assembly, south and north.
117117	08/16/01	Cradle holding yellow LC-2 cart will not operate. Please assist as soon as possible. These engines are priority one. Thanks
117164	08/17/01	Overhead hoist #49. When the electrical power is turned on, the hoist moves on it's own to the wall. Work stoppage and safety hazard.
117182	08/17/01	Work stoppage/ hoist #54 in strip barn will not lift any objects under a full load/ please repair ASAP
117189	08/17/01	Hoist #70 adjust askew holding brake air gap.
117190	08/17/01	Hoist #70 tighten hoist motor mounting bolts
117191	08/17/01	Hoist #70 tighten six loose electrical connections in hoist control box
117192	08/17/01	Hoist #70 adjust pendant electrical cable on strain relief cable
117285	08/20/01	1. Cable holding control box is broken. 2 certification placard is torn.
117288	08/20/01	This is a follow-up to ticket #117285. Cable holding control box on hoist #287 is broken. Certification placard is torn on the same hoist. Located in the welding area.
117316	08/20/01	Shop is reporting jerky and intermittent operation of travel brakes on hoist 110. Please investigate and repair.
117317	08/20/01	Hoist #55 needs load capacity stickers on crane. Prepare surface to accept same. Install stickers on hoist.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
117318	08/20/01	Hoist #55 install tram points on lower hook. Identify hook by vibra peening hoist number 55 on hook.
117319	08/20/01	Hoist #55 tighten blue million electrical connections in hoist control cabinet. Seems like most of the pre-assembled electrical connections were in a state of looseness. Contractor attached pendant to control cabinet was the finest kind.
117320	08/20/01	Hoist #55 tighten blue million electrical connections in bridge control cabinet. Seems like most of the pre-assembled electrical connections were wonderful however, the contractor attached electrical wiring was relatively loose. Curious.
117321	08/20/01	Hoist #55 lubricate bridge drive trucks and bridge drive shaft pillow block bearings.
117322	08/20/01	Hoist #55 trolley brake askewness unacceptable, readjust to OEM specs.
117389	08/21/01	P507 test cell area, work stoppage, broken wire, needs new harness, electrical
117414	08/21/01	Hoist #86 NDT. Needed for upper and lower hook. Paperwork not available from supplier or so they said.
117415	08/21/01	Hoist #86 identify upper and lower hook. Tram points required on upper and lower hook.
117417	08/21/01	Hoist #86 identify new hoist with stickers.
117418	08/21/01	Hoist #86 attach pendant chain and size for height of hoist.
117419	08/21/01	Hoist #86 air hose feed at hoist connection has air leak. Repair air leak.
117447	08/21/01	Need control cables to be changed from small chain to rope on new hoist just installed
117495	08/21/01	Hoist #153 lubricate trolley wheel zerk fittings.
117496	08/21/01	Hoist #153 clean holding brake and reset air gap to something nice.
117497	08/21/01	Hoist #215 lubricate trolley wheel zerk fittings.
117498	08/21/01	Hoist #215 pendant control direction plate broken, replace direction plate with one of our last great directions.
117501	08/21/01	Hoist #215 pendant control switch assemblies corroded. Replace switches and buttons.
117503	08/21/01	Hoist #215 brake air gap askew, adjust air gap to OEM. Specs.
117504	08/21/01	Hoist #215 control transformer loose, disassemble control box. Tighten loose transformer hardware. Reassemble control.
117506	08/21/01	Hoist #207 lubricate trolley wheel zerk fittings.
117509	08/21/01	Hoist #207 hot shoe riding out of old dilapidated hot rail, particularly at the worn out hot rail splice cover. Tighten hot shoe spring retainer so as to hold hot shoe tighter to the rail.
117511	08/21/01	Hoist #207 load chain bucket riding askew. Realign the askewness, and tighten to prevent from going caty wampus.
117514	08/21/01	Hoist #207 lower hook latch askew. Realign the askewness and reset latch for proper alignment.
117574	08/22/01	Brake not working in horizontal travel. Crane no 148 work stoppage.
117577	08/22/01	Hoist #419's lower limit switch does not work.
117578	08/22/01	Hoist #420's lower limit switch does not work.
117579	08/22/01	Hoist #421's lower limit switch does not work.
117628	08/22/01	Hoist #108 tighten loose electrical connections in bridge control box.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
117630	08/22/01	Hoist #108 tighten loose electrical connections in hoist control box.
117631	08/22/01	Hoist #108 wire pulled out of junction box
117632	08/22/01	Hoist #108 wire pulled out of pendant button station
117633	08/22/01	Hoist #108 retaining nut loose on wire grip
117634	08/22/01	Hoist #108 strain relief chain too long on pendant support
117635	08/22/01	Hoist #108 holding brake air gap askew
117637	08/22/01	Hoist #108 trolley brake air gap askew
117638	08/22/01	Hoist #108 upper limit on hoist needs adjustment
117639	08/22/01	Hoist #108 wire rope on drum not revved correctly, realign
117640	08/22/01	Hoist #108 western bridge brake erroneously adjusted, correct
117641	08/22/01	Hoist #108 loose foreign objects found on top of bridge, remove
117642	08/22/01	Hoist #108 foundation hardware at foot of support post slightly loose, tighten
117666	08/22/01	Air hoist #227 down button is stuck, hoist is laying on the floor, if tape breaks keeping it from going any further the cable spool will unwind. (maintenance turned off orange #227 disconnect and air did not secure. Is this the emergency shut off?)
117668	08/22/01	Cannot find the emergency air shut off valve for hoist #227 in the P&P paint area. Please show us where it is. If there is not one, please install one.
117669	08/22/01	Air hoist #227 down button is stuck, hoist is laying on the floor, if tape breaks keeping it from going any further the cable spool will unwind. (maintenance turned off orange #227 disconnect and air did not secure. Is this the emergency shut off?)
117738	08/23/01	Change stripped cover bolts to studs
117739	08/23/01	Adjust holding brake
117740	08/23/01	Replace emergency stop button.
117771	08/24/01	Hoist #48 certification date unreadable,
117772	08/24/01	Hoist #48 bridge moves after releasing control button and so does the hoist.
117813	08/24/01	I need to look at wiring on hoist 48.
117834	08/24/01	Hoist 148, CTD cleaning shop 133, holding brake near max setting. Disassemble, clean record measurements, reassemble, set air gap to minimum setting .015"
117835	08/24/01	Hoist 148, CTD cleaning shop 133, replace missing junction box cover on bridge electrical power wiring north end of bridge.
117836	08/24/01	Hoist 148, CTD cleaning shop 133, replace bolt through angle iron end stops with Cleveland tram rail OEM style end stops. Correct style located in bldg 1007 storage area.
117961	08/27/01	Hoist #68 will not work, work stoppage. EIN 006855
117969	08/27/01	Hoist 308, single monorail in 402 TC, remove hook have NDI performed, lubricate and reinstall hook
117984	08/27/01	Hoist 214, CTD cleaning shop jib, remove hooks have NDT performed on hooks. Lubricate and reinstall hooks
118024	08/28/01	Hoist 147, pneumatics canning area, remove hook, have NDT performed, lubricate and replace hook
118027	08/28/01	Hoist #20 in H46 hangar needs wire rope replaced. Hoist is now tagged out per crane center audit team.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
118049	08/28/01	Hoist #76 chain bucket hardware needs to be tightened.
118050	08/28/01	Hoist #76 limit switch screw shaft rusty, remove rust and lubricate with light oil.
118051	08/28/01	Hoist #76 metal brake parts rusty, remove rust and lubricate with light oil. Do not oil brake disc contact surfaces.
118052	08/28/01	Hoist #76 adjust brake air gap to .025" after reassembly from brake part cleaning.
118053	08/28/01	Hoist #76 reattach pendant wire loop to hoist.
118055	08/28/01	Hoist #76 molded grommet on pendant wire at hoist torn, order power cord assembly.
118069	08/28/01	Hoist 336, extra emergency chain hoist that replaced shawbox air screamer. Remove from rail and store out of sight and mind. Till later. Count washers. /
118107	08/28/01	Hoist #214 lubricate all zerk fittings on trolley.
118108	08/28/01	Hoist #214 brake gap askew, adjust brake to OEM specs.
118109	08/28/01	Hoist #214 upper hook safety latch missing, install safety latch on upper hook.
118110	08/28/01	Hoist #214 remove power feed from hoist control box. Remove hoist for NDT inspection.
118111	08/28/01	Hoist #214 reinstall hoist on jib and reattach power feed to hoist control box.
118114	08/28/01	Urgent request to have the air line repaired at the controls.
118202	08/29/01	Hoist #383 air pendant has sticking button, disassemble valve assembly and clean and lubricate. Reassemble valve.
118203	08/29/01	Hoist #383 lubricate trolley zerk fittings.
118205	08/29/01	Hoist #383 hoist needs a good scrub and a rinse.
118206	08/29/01	Hoist #383 adjust air line lubricator.
118210	08/29/01	Hoist #383 attention 611. Possible engineering intervention. May need more gussets installed.
118231	08/29/01	Hoist #336, appears to have red rope fibers showing through the steel strands. It may be in a unsafe condition. Request that it be checked as soon as possible. If it breaks, will cause a gigantic work stoppage.
118255	08/29/01	Hoist #308 in building 4188 is inoperative. Need maintenance to repair hoist. This is a work stoppage situation.
118356	08/30/01	Hoist 134, H-46 hangar install correct style end stops. Do not weld.
118421	08/31/01	Hoist will not function, it stopped in mid-stream. This is a work stoppage and the unit is suspended in mid-air. Safety issue as well.
118431	08/31/01	Remove hoist 196 in oxygen shop from service. Replace with hoist 322 from aisle between 137 machine shop and production control.
118565	09/04/01	Lift #412648 will not re-charge.
118620	09/04/01	Hoist #308 trolley drive coupling worn, order new coupling.
118621	09/04/01	Hoist #308 tighten electrical connections in hoist and trolley control boxes.
118622	09/04/01	Hoist #308 trolley brake air gap out of tolerance, adjust to minimum air gap of .040".
118641	09/04/01	Need to install new certification decal on hoist #145. Decal has come off.
118685	09/05/01	Unit #57 will not move on bridge function
118712	09/05/01	Hoist 322, lengthen pendant control wire to acceptable height for shop personnel

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
118713	09/05/01	Hoist 322, adjust upper and lower limits to accommodate new location
118714	09/05/01	Hoist 322, extend power feed conductors to reach new hoist
118853	09/06/01	Hoist number 390 is inoperable work stoppage!!!!!!
118899	09/07/01	Hoist #293 retaining snap ring coming out of brake hub, replace snap ring.
118900	09/07/01	Hoist #293 disassemble holding brake, clean all brake parts, reassemble holding brake and reset air gap to OEM specifications of .032.
118901	09/07/01	Hoist #293 west bridge brake is below minimum tolerance. Reset air gap to 1/4".
118903	09/07/01	Hoist #292 disassemble holding brake, clean holding brake parts, reassemble holding brake and set holding brake air gap to .032".
118904	09/07/01	Hoist #292 replace dust covers on pendant control buttons.
118905	09/07/01	Hoist #292 replace oil level viewing port pipe plug, worn removal handle (rounded off square on end of pipe plug). Replace with 1/8" pipe plug.
118907	09/07/01	Hoist #292 found seven loose connections in bridge control box.
118911	09/07/01	Hoist #292 order contacts for contactors, P&H 479u208d11, P&H 479U193D11. 8hr 30 amp 432020-D8 these are contactors in the hoist control cabinet.
118924	09/07/01	Hoist no, 140;136 need tags put back on them
118951	09/07/01	Crane trolley brake does not work.
118967	09/07/01	Hoist #418 lubricate hoist load chain with light oil.
118968	09/07/01	Hoist #418 disassemble holding brake and lubricate all applicable parts.
118969	09/07/01	Hoist #418 disassemble holding brake and clean rust from all applicable parts.
118971	09/07/01	Hoist #418 lubricate jib rollers at column. Lubricate all associated parts affected by outdoor elements.
118974	09/07/01	Trolley on hoist #132 will not move
118981	09/07/01	Hoist #147 tighten one base bolt on free standing support post for runway.
118982	09/07/01	Hoist #147 adjust primary upper limit so as to make before secondary.
118983	09/07/01	Hoist #147 tighten set screws in bridge drive sprocket.
118984	09/07/01	Hoist #147 grease bridge drive shaft.
118985	09/07/01	Hoist #147 adjust holding brake to spec.
119078	09/10/01	Please check/adjust/repair upper limit switch on hoist 22 in hangar 3. Reported on monthly bridge crane inspection not to be working.
119079	09/10/01	Check/repair/replace hook safety latch on hoist 20 in hangar 3. Reported as bent on monthly bridge crane inspection form.
119131	09/10/01	Overhead bridge #1 (shop 94405 pre/post test area, bldg 137) dripping oil from one of the drive motors. Please check for possible leak.
119160	09/11/01	Hoist needs brake adjusted, and only two speeds work on the button pad. #55 hoist
119201	09/11/01	Electrical hoist #116 will not trolley. This is a work stoppage situation.
119259	09/13/01	Hoist #53 disassemble brake housing from hoist and lube brake parts.
119260	09/13/01	Hoist #53 airline oiler oil level low, add oil.
119261	09/13/01	Hoist #53 hoist trolley zerk fittings require grease, add grease to zerk fittings on trolley.

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
119269	09/13/01	Solenoid reflector for bridge javelin is partially dislodged and has "nearly" disabled bridge javelin access for test cell #9. Please send someone to reattach reflector in proper position.
119282	09/13/01	Pendant controller for referenced engine cradle has a pinched wire between the case and the back shroud. Please repair as necessary, potential shock hazard.
119310	09/13/01	Hoist #384 holding brake out of tolerance, set to .015".
119311	09/13/01	Hoist #384 hoist control cabinet, three loose electrical connections, tighten same.
119313	09/13/01	Hoist #384 bridge drive motor brake inoperative, adjust spline drive to OEM specifications. Drill and install roll pin. Set brake air gap to .020".
119377	09/14/01	Hoist #385 adjust hoist holding brake to minimum tolerance of .015".
119379	09/14/01	Hoist #385 tighten all electrical connections in hoist control box, should be about eight.
119380	09/14/01	Hoist #385 lower limit switch needs to be adjusted so as to keep hook from contacting the floor.
119382	09/14/01	Hoist #385 wire grip on pendant control cable at pendant has multiple broken wires which not only jab shop personnel but also inspectors, replace wire grip.
119383	09/14/01	Hoist #384 wire grip on pendant control cable at pendant has multiple broken wires which not only jab shop personnel but also inspectors, replace wire grip.
119384	09/14/01	Hoist #384 switch retaining screws inside pendant control loose, tighten same.
119385	09/14/01	Hoist #385 switch retaining screws inside pendant control loose, tighten same.
119419	09/14/01	Hoist #54 disassemble brake for inspection
119420	09/14/01	Hoist #54 lubricate brake release parts
119421	09/14/01	Hoist #54 holding brake housing screw has stripped out threads in hoist body. Repair by helicoil as per 611 instructions. Replaced a #6 mm screw with a 1/4-28 screw
119563	09/17/01	Hoist #321 disassemble hoist for brake disc measurement. Reassemble hoist.
119658	09/18/01	Hoist #5 repair boom sheave, remove rust and lubricate sheave and axel.
119659	09/18/01	Hoist #5 repair power feed.
119660	09/18/01	Hoist #5 remove control cover for inspection and straighten cover hardware.
119690	09/18/01	Hoist #57 is inoperative. This is a work stoppage! Please fix ASAP.
119692	09/18/01	Locate replacement chain hoist for adding on to hoist 88 in 421.. Contact if you can find it
119838	09/20/01	Reverse function of bridge on hoist #299 in landing gear shop is inoperative
119849	09/20/01	Hoist #277 disassemble holding brake. Clean brake assembly. Reassemble brake assembly. Set air gap to .015".
119850	09/20/01	Hoist #277 order oil seals and gasket for hoist #277.
119855	09/20/01	Hoist #277 install oil seals and gasket for hoist #277.
119891	09/20/01	Restore bridge cranes' javelin rail wiring to OEM specifications. Reference task 118581. The original OEM drawings provided a safety for full javelin retraction before allowing bridge movement.
119969	09/21/01	Hoist 292 and 293 out of load test certification, work stop

Industrial Maintenance Services
Overhead Hoist Work Orders (continued)

N00421-03-R-0060

Ticket No	Date Created	Description
120093	09/24/01	Carriage hoist #359 & 360 needs repairing. Work stoppage.
120096	09/24/01	Work stoppage. Hoist will not work. Will not move at all. Hoist needed to lift items to put in tank for inspection this morning.
120108	09/24/01	Perform hook NDT on hoist 349- due date 10/17/01
120113	09/24/01	Perform hook NDT on hoist 348- due date 10/17/01
120145	09/24/01	Perform hook NDT on hoist 106- due date 10/03/01
120164	09/24/01	Hoist #145 lubricate bridge truck wheels.
120166	09/24/01	Hoist #145 holding brake air gap approaching maximum tolerance, reset air gap to minimum tolerance of .060".
120167	09/24/01	Hoist #145 bolts holding bridge drive motors loose, tighten.
120184	09/24/01	Perform hook NDT on hoist 223- due date 10/26/01
120187	09/24/01	Perform hook NDT on hoist 2- due date 10/26/01
120208	09/24/01	Hoist #134 coils on holding brake pole plate have cracked welds, cannot set air gap. Order pole plate.
120277	09/25/01	Hoist are locked out, and we need to use them ASAP!
120296	09/25/01	Remove hoist #74 from blast booth under shelter and replace with hoist #200, the 300 lb air hoist removed from hazardous test and stored in test equipment shed behind 1006.
120307	09/25/01	Hoist #20 loose electrical connections in hoist control box, tighten electrical connections.
120308	09/25/01	Hoist #20 hoist holding brake air gap on solenoid at maximum tolerance, adjust to minimum tolerance of 11/16".
120421	09/26/01	Overhead hoist SN 88 is inoperative, cable slipping on down as hoist is being lowered
120426	09/26/01	Replace motor in hoist 277
120507	09/27/01	Remove hoist 163 and store for later use. This is the one that was installed and nobody wanted.
120622	09/28/01	Hoist 67 controller is damage labor stop
120670	09/28/01	Hoist #343 remove accumulated paint from lower hook.
120671	09/28/01	Hoist #344 remove accumulated paint from lower hook.
120672	09/28/01	Hoist #345 remove accumulated paint from lower hook.

TE 3.22 – Overhead Hoist Work Orders

TE 3.23 – GSE Electrical and Mechanical Work Orders

Government provides data on historical workload in this technical exhibit. This data is raw and represents actual communication among customers, maintenance planners, and artisans. The data is as it appears in the maintenance management system except for removal of personal information, inappropriate language, and acronyms expanded as practicable. Each set of data includes a ticket number, ticket date, and a problem description. The tickets approximate the work required during the base one-year period.

The work orders numbers in this technical exhibit may not match exactly the workload forecast in Section C-7. There are two reasons. First, customers occasionally submit more than one requirement for a single problem indicating the recorded workload over represents the work performed. Second, artisans perform a substantial fraction of their work on verbal orders or on their own initiative indicating the recorded workload under represents work performed. However, the net result approximates actual work required.

We audited by sampling the workload in each technical exhibit. We also sought subject matter expert advice on the amount of over- and under-reporting in each area. The result is our estimate of the amount of over- and under-reporting of each workload set. Thus, to get the forecast values in C-7 for the workload in this Technical Exhibit, we increased the number of tickets by 15.26 percent for night shift and 20 percent to adjust for under reported tickets.

Report Date	WO #	WO Description	Asset Description
10/01/01	WA03535	Will not operate	Cart Electric
10/01/01	WA03537	No reverse	Cart Electric
10/01/01	WA03539	R & R transmission dipstick tube	Tractor A/S32A-30A
10/01/01	WA03540	Check out starter	Tractor A/S32A-30A
10/01/01	WA03544	Replace headlights	Cart Vehicle
10/01/01	WA03548	Replace hydraulic motor on cherry picker	Boom Crane, Reversible
10/01/01	WA03549	Broken towbar	Bldg 154
10/01/01	WA03552	Electric cart roadside repair	Bldg 154
10/02/01	WA03556	Replace dust cap, repair brakes, and replace	Trailer Tank Installation and Removal
10/02/01	WA03557	Service ---repair start mechanism and tighten	Cart Gas
10/02/01	WA03560	Won't hold charge, broken windshield	Cart Electric
10/02/01	WA03564	F-4 pogos remove from wagons and store in Bldg 1	Bldg 154
10/03/01	WA03941	Incorporate section number 5449	Tow Tractor Aircraft A/S32A-42
10/03/01	WA03942	Incorporate section number 5449	Tow Tractor Aircraft A/S32A-42
10/03/01	WA03944	Incorporate section number 5449	Tow Tractor Aircraft A/S32A-

Industrial Maintenance Services
GSE Electrical and Mechanical Work Orders (continued)

N00421-03-R-0060

Report Date	WO #	WO Description	Asset Description
			42
10/03/01	WA03945	Incorporate section number 5449	Tow Tractor Aircraft A/S32A-42
10/03/01	WA03946	Incorporate section number 5449	Tow Tractor Aircraft A/S32A-42
10/03/01	WA03947	Incorporate section number 5449	Tow Tractor Aircraft A/S32A-42
10/03/01	WA03954	Incorporate section number 5449	Tow Tractor Aircraft A/S32A-42
10/03/01	WA03973	Blast, paint white	Maintenance Platform B-4A
10/03/01	WA03978	Overhaul	Cart Electric 01456
10/03/01	WA03979	Replace charging cord	Cart Electric
10/03/01	WA03981	Steering stiff (repair as necessary) replace wood	Bldg 154
10/03/01	WA03982	Overhaul	Cart Electric (Grid D16)
10/03/01	WA03989	Tires won't move freely	Blade Dolly CH-46
10/04/01	WA03995	Replace 2ea. Red tagged gauges as necessary	Cabin Pressure Tester
10/04/01	WA04004	Tow bar is broken remove, repair, & reassemble	Blade Dolly CH-46
10/04/01	WA04006	Replace glass, check brakes, won't hold on an	Tractor A/S32A-30
10/04/01	WA04007	Need to check and repair parking brake and batteries	Cart Electric
10/05/01	WA04016	Electric cart roadside repair	Bldg 154
10/05/01	WA04023	Won't idle, running rough, tune up	Tractor A/S32A-30A
10/05/01	WA04024	Won't stay charged	Tractor A/S32A-30
10/05/01	WA04025	Trouble shoot and repair electrical malfunction	Dummy Load Electrical
10/05/01	WA04026	Trouble shoot and repair electrical malfunction	Dummy Load Electrical
10/06/01	WA04695	De-preserve	Heater Portable H-1
10/09/01	WA04029	Install graphics	Heater Portable H-1
10/09/01	WA04030	Install graphics	Heater Portable H-1
10/09/01	WA04032	Repair wiring	Cart Electric
10/09/01	WA04034	Air field truck 14-01441 won't start (coil)	Bldg 154
10/10/01	WA04039	E-cart install graphics, accept and issue	Bldg 154
10/10/01	WA04040	Fix leak on jack	Jack Aircraft T25-1FH
10/10/01	WA04044	Oil & temp gauges in op, brakes grabbing & locking	Truck Air Field USN 14 07263
10/10/01	WA04045	Adj. Brakes and turn signal control needs	Tractor A/S32A-30
10/11/01	WA04059	Repair steering column	Cart Electric G12
10/11/01	WA04068	Brakes locked up	Cart Electric
10/12/01	WA04092	Repair exhaust and light will not come on	Floodlight Set
10/15/01	WA04099	Electric cart roadside repair	Bldg 154
10/15/01	WA04100	Misc repairs nights only	Bldg 154
10/15/01	WA04101	Repair steering	Cart Electric
10/15/01	WA04106	Replace electric cord	Cart Electric
10/15/01	WA04111	Repair brakes	Cart Electric

Industrial Maintenance Services
GSE Electrical and Mechanical Work Orders (continued)

N00421-03-R-0060

Report Date	WO #	WO Description	Asset Description
10/16/01	WA04116	Restore DC capability	Power Plant Mobile Electric MMG-1
10/16/01	WA04121	Will not operate	Cart Electric
10/16/01	WA04125	Check alternator output and battery will not	Tractor A/S32A-30
10/16/01	WA04127	Engine noise (rod)	Tractor A/S32A-30
10/16/01	WA04128	Air field truck 14-01439 won't start and	Bldg 154
10/16/01	WA04129	Air field truck 14-03513 exhaust, door glass,	Bldg 154
10/16/01	WA04136	Front transmission seal needs repair	Tractor A/S32A-30
10/17/01	WA04293		Powder Feed Unit
10/17/01	WA04294	Enable DC capability	Power Plant Mobile Electric MMG-1
10/17/01	WA04296	Electrical cord replacement	Cart Electric
10/18/01	WA04307	Repair headlights	Utility Vehicle, Gas
10/19/01	WA04334	Rear end broken	Cart Electric
10/19/01	WA04335	Service and upgrade batteries	Cart Electric
10/19/01	WA04339	Electric cart roadside repair	Bldg 154
10/22/01	WA04342	Jack will not operate under load	Jack Aircraft T25-1FH
10/22/01	WA04343	Repair ram leak	Maintenance Platform B-4A
10/22/01	WA04345	Prepare for DC capability	Power Plant Mobile Electric MMG-1
10/22/01	WA04348	Prepare for DC capability	Power Plant Mobile Electric MMG-1
10/22/01	WA04349	Prepare for DC capability	Power Plant Mobile Electric MMG-1
10/22/01	WA04350	Install graphics	Heater Portable H-1
10/22/01	WA04351	Install graphics	Heater Portable H-1
10/22/01	WA04352	Remove & repair tow bar	Blade Dolly CH-46
10/22/01	WA04355	Repair alternator belt	Tractor A/S32A-30A
10/22/01	WA04356	Apply graphics	Maintenance Platform B-4A
10/23/01	WA04361	Need to replace gauges as necessary	Cabin Pressure Tester
10/23/01	WA04368	No brake	Cart Electric
10/23/01	WA04370	Blown charger	Cart Electric
10/23/01	WA04388	No charge	Cart Electric
10/23/01	WA04390	Repair horn	Cart Electric
10/24/01	WA04431	Will not operate	Cart Electric
10/24/01	WA04436	Post deployment operational inspection and	Mobile Electric Power Plant NC-10C
10/24/01	WA04438	Post deployment operational inspection and	Mobile Electric Power Plant NC-10C
10/25/01	WA04467	Will not operate	Cart Vehicle
10/25/01	WA04469	Restore DC capability & load test	Power Plant Mobile Electric MMG-1
10/25/01	WA04471	Won't hold charge	Cart Electric
10/26/01	WA04479	Change pump & load test	Maintenance Platform B-4A
10/26/01	WA04483	Service batteries, adjust brakes, lube throttle	Cart Electric

Industrial Maintenance Services
GSE Electrical and Mechanical Work Orders (continued)

N00421-03-R-0060

Report Date	WO #	WO Description	Asset Description
10/26/01	WA04485	Replace platform and prepare for paint	Maintenance Platform B-1
10/26/01	WA04498	Electric cart roadside repair	Bldg 154
10/26/01	WA04508	Repair electric cart as necessary	Cart Electric
10/26/01	WA04648	Repair throttle knob	Floodlight Set
10/26/01	WA04651	Heater will not light, repair as necessary	Heater Portable H-1
10/29/01	WA04655	Check out burner	Heater Portable H-1
10/29/01	WA04658	Repair heater	Tractor A/S32A-30A
10/30/01	WA04684	Will not light	Heater Portable H-1
10/30/01	WA04686	Apply graphics	Heater Portable H-1
10/30/01	WA04688	Apply graphics	Heater Portable H-1
10/30/01	WA04689	Change batteries	Cart Electric
10/30/01	WA04692	De-preserve	Heater Portable H-1
10/30/01	WA04696	De-preserve	Heater Portable H-1
10/30/01	WA04697	De-preserve	Heater Portable H-1
10/30/01	WA04698	De-preserve	Heater Portable H-1
10/30/01	WA04699	De-preserve	Heater Portable H-1
10/30/01	WA04700	De-preserve	Heater Portable H-1
10/30/01	WA04702	De-preserve	Heater Portable H-1
10/30/01	WA04704	De-preserve	Heater Portable H-1
10/30/01	WA04705	De-preserve	Heater Portable H-1
10/30/01	WA04707	De-preserve	Heater Portable H-1
10/30/01	WA04735	Brake will not stop tractor and glow plug bad	Tow Tractor Aircraft A/S32A-42
10/30/01	WA04741	Repair or replace broken pin in the handle	Pallet Jack Grid B13
10/31/01	WA04968	Won't go forward	Cart Electric G12
10/31/01	WA04970	No heat, runs rough when cold, loose exhaust	Bldg 154
10/31/01	WA04971	Over heats	Heater Portable H-1
10/31/01	WA04973	Change QD to large	Corrosion Control Cart (A/M32M-18A)
11/01/01	WA04983	Repair & Replace gages as necessary	Cabin Pressure Tester
11/01/01	WA04985	Will not start	Heater Portable H-1
11/02/01	WA04986	Broken windshield	Cart Electric
11/02/01	WA04987	Repair brake	Cart Electric
11/02/01	WA04988	Not holding pressure	Pressure Jet Steam Cleaner A/M 48M-4
11/02/01	WA04990	Overheating, temperature gage inop	Heater Portable H-1
11/02/01	WA04995	Electric cart roadside repair	Bldg 154
11/05/01	WA04999	Steering alignment out	Tractor A/S32A-30
11/05/01	WA05000	Engine turns over, getting fuel, won't start	Tractor A/S32A-30A
11/06/01	WA05003	Electrical short in turn signals	Tractor A/S32A-30A
11/06/01	WA05020	Broken left rear axle	Cart Gas
11/07/01	WA05294	Won't start (elect)	Tractor A/S32A-30A
11/07/01	WA05295	Smokes and puts out fumes	Heater Portable H-1
11/07/01	WA05296	GS1221 M15/M18 HTS (5 units) R & R as	Bldg 154

Industrial Maintenance Services
GSE Electrical and Mechanical Work Orders (continued)

N00421-03-R-0060

Report Date	WO #	WO Description	Asset Description
		required to	
11/08/01	WA05301	Check for antifreeze leak pull rear tires to	Tow Tractor Aircraft A/S32A-42
11/08/01	WA05302	Ram is leaking	Maintenance Platform B-4A
11/08/01	WA05303	Dead battery	Tractor A/S32A-30
11/13/01	WA05320	Electric cart roadside repair	Bldg 154
11/13/01	WA05323	Won't operate	Cart Electric
11/13/01	WA05325	Replace batteries	Cart Electric
11/13/01	WA05327	No brakes	Cart Electric
11/13/01	WA05329	Replace charger	Cart Electric
11/13/01	WA05330	Shifter switch broken	Cart Electric
11/13/01	WA05332	Apply graphics	Heater Portable H-1
11/13/01	WA05333	Apply graphics	Heater Portable H-1
11/13/01	WA05335	Check charging system--not holding a charge	Tractor A/S32A-30A
11/13/01	WA05336	Rear end broke	Cart Gas
11/13/01	WA05340	Missing footers on two jack stands	Maintenance Platform B-2
11/13/01	WA05341	Right footing on jack stand needs to be put	Maintenance Platform B-2
11/14/01	WA05576	Inop	Trailer Tank Installation and Removal
11/14/01	WA05578	Adjust or repair brakes	Cart Electric
11/14/01	WA05581	Leaking ----- two brakes locked up	Maintenance Platform B-1
11/15/01	WA05591	Quit running	Tractor A/S32A-30A
11/15/01	WA05592	Adjust parking brake	Tow Tractor Aircraft A/S32A-42
11/15/01	WA05593	Air field truck 14-03513 replace and	Bldg 154
11/16/01	WA05595	Will not operate	Cart Electric
11/16/01	WA05597	Dead battery	Cart Gas
11/19/01	WA05844	Electric cart roadside repair	Bldg 154
11/19/01	WA05846	Fan assy failed-----damaged radiator	Corrosion Control Cart (A/M32M-18A)
11/19/01	WA05847	Fan assy failed-----damaged radiator	Mobile Electric Power Plant NC-10C
11/19/01	WA05848	Fitting on smaller hose wrong size	Corrosion Control Cart (A/M32M-18A)
11/19/01	WA05854	Check charging system and/or replace batteries	Crane Maintenance Wheel Mount 8.5 Ton
11/19/01	WA05855	Air field truck 14-07192 won't start,	Bldg 154
11/20/01	WA05864	Anti freeze leak in unknown location	Tow Tractor Aircraft A/S32A-42
11/21/01	WA05872	Repair brakes as necessary	Tractor A/S32A-30A
11/26/01	WA05883	Electric cart roadside repair	Bldg 154
11/26/01	WA05884	Repair leak	Maintenance Platform B-4A
11/26/01	WA05885	Center won't hold pressure	Jack Aircraft T25-1FH
11/26/01	WA05886	Repair leak	Jack Aircraft T25-1FH
11/26/01	WA05907	Overhaul	Cart Electric

Industrial Maintenance Services
GSE Electrical and Mechanical Work Orders (continued)

N00421-03-R-0060

Report Date	WO #	WO Description	Asset Description
11/27/01	WA06047	Won't shift left or right need ASAP	Trailer Tank Installation and Removal
11/28/01	WA06427	Broken fan belt	Tractor A/S32A-30
11/28/01	WA06467	Check and repair as necessary (dead battery)	Tiltmaster w/ Battery Charger (DA)
11/28/01	WA06470	No brakes	Cart Electric
11/28/01	WA06528	Leaking ram	Maintenance Platform B-1
11/29/01	WA06646	Repair leaking ram	Maintenance Platform B-1
11/29/01	WA06649	Stuck accelerator and fix lights	Cart Electric
11/29/01	WA06670	Will not operate	Cart Electric
12/03/01	WA06995	Electric cart roadside repair	Bldg 154
12/03/01	WA07008	Noise in rear end	Tractor A/S32A-30A
12/03/01	WA07023	R & R transmission dipstick tube	Tractor A/S32A-30A
12/03/01	WA07035	Apply graphics	Heater Portable H-1
12/03/01	WA07041	Apply graphics	Heater Portable H-1
12/03/01	WA07043	Replace batteries 4 each	Mobile Electric Power Plant NC-10C
12/03/01	WA07078	Jack won't go down	Jack Axle
12/03/01	WA07143	Replace bolt	Scissor Lift
12/04/01	WA07347	R & R batteries fix right door	Cart Electric
12/04/01	WA07375	No forward	Cart Electric
12/04/01	WA07377	R & R fan belt	Tractor A/S32A-30A
12/04/01	WA07380	R & R left front bearings, dust cap was missing	Tractor A/S32A-30A
12/05/01	WA07690	Troubleshoot (possible blown head gasket)	Tractor A/S32A-30A
12/10/01	WA08207	Make repairs and replace belts as necessary	Bldg 154
12/10/01	WA08299	Starter needs repair	Tractor A/S32A-30
12/10/01	WA08304	Heater fan and driver's door handle need repair	Tractor A/S32A-30A
12/10/01	WA08308	Replace bumper padding around top	Maintenance Platform B-2
12/10/01	WA08318	Won't start and taillight lenses need to be	Tractor A/S32A-30A
12/11/01	WA08494	Dead battery	Floodlight Set
12/12/01	WA08906	Repair rear brake and taillights	Tractor A/S32A-30
12/12/01	WA08908	Bad batteries	Cart Electric
12/13/01	WA09062	Air field truck 14-01441 alternator belt	Bldg 154
12/17/01	WA09316	Electric cart roadside repair	Bldg 154
12/17/01	WA09340	Won't run	Tractor A/S32A-30A
12/17/01	WA09726	Horn has short (it goes off when turning)	Tractor A/S32A-30A
12/17/01	WA09727	Replace rear towing hitch	Maintenance Platform B-5
12/18/01	WA09757	Dead battery	Tractor A/S32A-30A
12/18/01	WA09768	Repair as needed ASAP	Stand T-58 Engine
12/18/01	WA09775	Air field truck brakes, driver's door, rear and	Bldg 154
12/18/01	WA09798	Air field truck 14-01439 smoke coming from	Bldg 154
12/19/01	WA10171	Wires burning under dash and fire wall	Tractor A/S32A-30A
12/19/01	WA10248	Not holding a charge	Tractor A/S32A-30A

Industrial Maintenance Services
GSE Electrical and Mechanical Work Orders (continued)

N00421-03-R-0060

Report Date	WO #	WO Description	Asset Description
12/20/01	WA10347	AC will not work	Mobile Electric Power Plant NC-10C
12/20/01	WA10374	Floor jack repair as necessary	Bldg 154
12/21/01	WA10477	Electric cart roadside repair	Bldg 154
12/21/01	WA10479	Electric cart roadside repair	Bldg 154
01/02/02	WA11305	Repair steering column box	Cart Electric
01/02/02	WA11308	R & R batteries, adjust brakes, and left door	Cart Electric
01/02/02	WA11323	Charge or replace battery	Heater Portable H-1
01/02/02	WA11345	No-go	Cart Electric
01/02/02	WA11373	Light cart skid replace broken shroud	Bldg 154
01/02/02	WA11416	Recharge or replace battery	Floodlight Set
01/02/02	WA11420	Recharge or replace battery	Floodlight Set
01/02/02	WA11422	Recharge or replace battery	Floodlight Set
01/03/02	WA11456	Air compressor SN 000061	Bldg 154
01/03/02	WA11457	Air compressor SN 000050	Bldg 154
01/03/02	WA11462	Air compressor SN 000053	Bldg 154
01/03/02	WA11507	Drain soap fill with oil	Corrosion Control Cart (A/M32M-18A)
01/07/02	WA11629	Electric cart roadside repair	Bldg 154
01/07/02	WA11717	Air field truck 14-01442 won't start	Bldg 154
01/07/02	WA11741	Won't go	Cart Electric
01/07/02	WA11787	Won't stay running	Tractor A/S32A-30A
01/09/02	WA12547	R & R input & output filters	Bldg 154
01/09/02	WA12570	Repair horn	Tractor A/S32A-30A
01/10/02	WA12660	Troubleshoot electrical malfunction	Dummy Load Electrical
01/11/02	WA12859	Repair brakes as necessary	Tow Tractor Aircraft A/S32A-42
01/14/02	WA12927	Electric cart roadside repair	Bldg 154
01/14/02	WA12937	Install IRAC	Mobile Electric Power Plant NC-10C
01/14/02	WA12944	Faults out when A/C is applied to aircraft	Mobile Electric Power Plant NC-10C
01/14/02	WA12947	Check A/C voltage problem on #2 cable reel	Mobile Electric Power Plant NC-10C
01/14/02	WA13022	Apply graphics & issue	Cart Electric
01/14/02	WA13043	Won't stay running	Power Plant Mobile Electric MMG-1
01/14/02	WA13069	Apply graphics & issue	Bldg 154
01/15/02	WA13169	Won't start	Air Compressor Commercial
01/15/02	WA13270	Replace rate of climb gauge	Cabin Pressure Tester
01/16/02	WA13370	Windshield replaced	Cart Electric
01/16/02	WA13378	Wipers not working, brake failure-test light not	Tractor A/S32A-30
01/16/02	WA13392	Replace belts, check engine knock, driver's door	Tractor A/S32A-30A
01/16/02	WA13412	Repair as necessary	Up-right Personnel Lift

Industrial Maintenance Services
GSE Electrical and Mechanical Work Orders (continued)

N00421-03-R-0060

Report Date	WO #	WO Description	Asset Description
01/16/02	WA13415	Repair as necessary	Up-right Personnel Lift
01/16/02	WA13417	Repair as necessary	Scissor Lift, Personnel
01/16/02	WA13419	Repair as necessary	Up-right Personnel Lift
01/16/02	WA13469	Check out front end	Tractor A/S32A-30A
01/17/02	WA13587	Free up screw ext.	Jack Aircraft T30-1VH5
01/17/02	WA13589	Free up screw ext.	Jack Aircraft T30-1VH5
01/17/02	WA13593	Handle for pump busted off	Maintenance Platform B-4A
01/17/02	WA13596	Need to rework or replace cabin indicator	Tester Pressurized Cabin
01/18/02	WA13724	Apply graphics & ready for issue	Cart Electric (Grid D16)
01/18/02	WA13742	Replace windshield	Cart Electric
01/22/02	WA13826	Electric cart roadside repair	Bldg 154
01/22/02	WA13833	Repair dash and switch lights	Tractor A/S32A-30A
01/22/02	WA13835	R & R frame	Maintenance Platform B-4A
01/22/02	WA13932	Leaks	Jack Aircraft T25-1FH
01/22/02	WA13936	Won't jack up	Jack Aircraft T17-1FH
01/22/02	WA13940	Repair dash lights, repair wiring on fuse panel,	Tractor A/S32A-30A
01/23/02	WA14337	Apply graphics & ready for issue	Maintenance Platform B-1
01/23/02	WA14338	Apply graphics & ready for issue	Compressor Air ACU-20M
01/23/02	WA14339	Apply graphics & ready for issue	Maintenance Platform B-1
01/23/02	WA14341	Apply graphics & ready for issue	Compressor Air ACU-20M
01/23/02	WA14352	Belt won't stay on-belt in seat	Tractor A/S32A-30A
01/23/02	WA14420	Check charging system and repair doors	Cart Electric
01/24/02	WA14573	Won't go forward or backwards	Cart Electric
01/24/02	WA14619	Electric cart roadside repair	Bldg 154
01/25/02	WA14683	Blown line (hydraulics)	Compressor Air ACU-20M
01/25/02	WA14698	No-go	Cart Electric
01/25/02	WA14757	No-go----- no charge	Cart Electric
01/28/02	WA14890	Belt off---check brakes	Tractor A/S32A-30A
01/28/02	WA14912	Fuel leaking at spark plug	Tractor A/S32A-30A
01/28/02	WA14945	Won't start	Tractor A/S32A-30
01/28/02	WA14982	Air field truck 14-03513 won't hold a charge	Bldg 154
01/29/02	WA15087	Break extension free and lubricate	Jack Aircraft T30-1VH5
01/29/02	WA15096	Won't start---bad battery	Tractor A/S32A-30A
01/29/02	WA15491	Replace power steering and water pump	Tractor A/S32A-30A
01/30/02	WA15578	Smoke from alternator area	Tractor A/S32A-30A
01/30/02	WA15634	Leaking ram	Maintenance Platform B-4A
01/30/02	WA15692	Air field truck 14-01439 ignition switch	Bldg 154
01/31/02	WA15772	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15778	Needs modification hole & pin	Trailer Engine Net-4
01/31/02	WA15780	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15786	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15788	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15803	Bad injector pump	Tractor A/S32A-30A

Industrial Maintenance Services
GSE Electrical and Mechanical Work Orders (continued)

N00421-03-R-0060

Report Date	WO #	WO Description	Asset Description
01/31/02	WA15812	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15813	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15816	Aircraft jack	Jack Aircraft T25-1FH
01/31/02	WA15819	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15820	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15821	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15823	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15824	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15825	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15827	Air field truck 14-00441 hard to start	Bldg 154
01/31/02	WA15829	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15830	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15831	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15832	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15833	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15834	Air field truck 14-03512 won't start (battery)	Bldg 154
01/31/02	WA15836	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15838	Aircraft jack	Jack Aircraft T12-1FH
01/31/02	WA15890	Electric cart roadside repair	Bldg 154
02/04/02	WA16078	Bent tie-rod needs repair & replace missing bolt	Trailer Engine 2000A
02/04/02	WA16129	No reverse	Cart Electric
02/04/02	WA16146	Will not start--motor locked up	Cart Gas
02/05/02	WA16238	Won't start	Heater Portable H-1
02/05/02	WA16248	Repair pump	Jack Aircraft T25-1FH
02/05/02	WA16264	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16266	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16268	Re-preserve	Jack T17-1FH
02/05/02	WA16269	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16270	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16272	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16273	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16276	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16277	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16278	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16279	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16281	Re-preserve	Jack Aircraft T17-1FH
02/05/02	WA16325	Repair burner	Heater Portable H-1
02/05/02	WA16333	Burner inop pumping fuel out exchanger	Heater Portable H-1
02/05/02	WA16340	Will not start	Compressor Air ACU-20M
02/06/02	WA16847	Won't stay running	Tractor A/S32A-30A
02/06/02	WA16858	Runs up too fast	Heater Portable H-1
02/06/02	WA16864	Modify	Trailer Engine Net-4

Industrial Maintenance Services
GSE Electrical and Mechanical Work Orders (continued)

N00421-03-R-0060

Report Date	WO #	WO Description	Asset Description
02/06/02	WA16923	Won't stay running--(fuel) adjust parking brake	Tow Tractor Aircraft A/S32A-42
02/07/02	WA17020	Throttle control adjustment screw broken	Tow Tractor Aircraft A/S32A-42
02/07/02	WA17052	Fix leak	Jack Aircraft T25-1FH
02/07/02	WA17057	Won't do anything	Cart Electric
02/08/02	WA17155	Repair soap dispenser function	Pressure Jet Steam Cleaner A/M 48M-4
02/08/02	WA17160	Unit will not start	Floodlight Set
02/08/02	WA17179	Gear selector inop	Tow Tractor Aircraft A/S32A-42
02/08/02	WA17220	Electric cart roadside repair	Bldg 154
02/12/02	WA17601	Ram will not retract, repair as necessary	Jack Aircraft T30-1VH5
02/12/02	WA17611	Remove and replace radiator and emergency brake	Tow Tractor Aircraft A/S32A-42
02/12/02	WA17613	Repair broken throttle	Floodlight Set
02/12/02	WA17617	Replace battery and master cylinder.	Tractor A/S32A-30A
02/12/02	WA17905	Repair and tighten secondary fuel filter base	Tractor A/S32A-30A
02/13/02	WA17983	Repair front end accident damage & replace	Cart Electric
02/14/02	WA18059	Repair transmission linkage	Tow Tractor Aircraft A/S32A-42
02/14/02	WA18087	Replace dead batteries	Mobile Electric Power Plant NC-10C
02/14/02	WA18113	Install interim rapid action change	Mobile Electric Power Plant NC-10C
02/14/02	WA18128	Replace charger	Cart Electric
02/14/02	WA18131	No service brakes	Truck Airfield
02/15/02	WA18198	Electric cart roadside repair	Bldg 154
02/19/02	WA18468	Battery not holding a charge	Truck Airfield USN 14 07263
02/20/02	WA18620	Apply graphics	Heater Portable H-1
02/20/02	WA18623	Apply graphics	Heater Portable H-1
02/20/02	WA18628	Apply graphics	Maintenance Platform B-1
02/20/02	WA18634	Apply graphics	Maintenance Platform B-1
02/20/02	WA18639	Apply graphics	Maintenance Platform B-1
02/20/02	WA18643	Apply graphics	Lifting Bar
02/20/02	WA18653	Overhaul & apply graphics	Cart Electric
02/20/02	WA18665	Won't hold charge	Cart Electric
02/21/02	WA18909	Change tie rod ends alternator not charging	Tractor A/S32A-30A
02/21/02	WA18929	Repair leak	Jack Aircraft T25-1FH
02/22/02	WA19051	Personal fan inside of tractor will not shut off	Tractor A/S32A-30
02/22/02	WA19054	Blower fan inside of tractor will not shut off	Tractor A/S32A-30
02/22/02	WA19070	Engine will not fire and fuel gauge does not work	Tractor A/S32A-30A
02/22/02	WA19094	Electric cart roadside repair	Bldg 154
02/22/02	WA19107	Engine turns over but won't start	Tow Tractor Aircraft A/S32A-42